

**QUICK  
REFERENCE  
PARTS  
MANUAL**



**8 kW to 2000 kW**

**STANDBY AND PRIME POWER GENERATORS**

## FOREWORD

This Quick Reference Parts Guide was created to assist the Generac Power Systems dealer and service technician with basic information related to Generac Power Systems service. It is intended for informational purposes only and is not designed as and should not be used as a comprehensive, all-inclusive manual. Should you require additional materials or information, please order them through your normal source of distribution or contact your normal source of advisement.

## GENERAC ENGINE CODES

(REFERENCE ONLY)

G1	Hyundai
G2	Mitsubishi
G3	Ford
G4	John Deere
G5	Daewoo/Doosan
G6	Kia
G7	GM
G8	Chrysler
G9	Deutz
G10	Detroit Diesel
G11	Chery
G12	Volvo
G13	Hino
G14	Jaguar
G15	IHI (Shibaura Machinery Corp.)

General Information ..... 2

Scheduled Maintenance Kits..... 7

Quick Reference Parts Listing for QT/CPL Series ..... 8

Quick Reference Parts Listing for Diesel Engines ..... 10

Quick Reference Parts Listing for Gas Engines ..... 30

Common Parts for Liquid Cooled Standby Generators ..... 39

Required Parts List for Service of Generac Power Systems ..... 40

Quick Reference Parts Listing for DG 50 Units ..... 41

Transfer Switch Common Parts ..... 42


Common Parts for Control Panels ..... 43

Electronic Governors ..... 44

Battery Options, Pre Alarm Kits & Battery Chargers ..... 45

Touch Up Paint ..... 48

Useful Tools for Shop and Field ..... 49



◆ DATA PLATE

Every generator set has a metal DATA PLATE that contains important information pertinent to the generator. The data plate, which can be found attached to the generator's lower connection box, lists the unit's serial number and its rated voltage, amps, wattage capacity, phase, frequency, rpm, power factor, etc.

TYPE CODE		GENERATOR SET DATA		MADE IN USA
MODEL	SERIAL			
RATED KW	RATED KVA	UPSIZING ALT. KW		
VOLTS	AMPS			
PHASE	POWER FACTOR	HERTZ		
ALT. R.P.M.	ENG. R.P.M.	PROD. DATE		
GENERAC POWER SYSTEMS, INC. WAUKESHA, WI.				
CLASS <input type="checkbox"/> ROTOR <input type="checkbox"/> STATOR WINDING INSULATION AT 40° AMBIENT				

◆ DATA CARD

A DATA CARD is also affixed to the lower connection box of each standby generator set. A second, matching card is located under the control panel cover. Like the data plate, this card also contains valuable information pertaining to the generator. When requesting information, ordering replacement parts, asking for service, etc., the information from this card is needed (see page 19 for example of generator set data card). It provides the following information:

- Generator Model Number
- Date of Manufacture
- Generator Identification Code
- Generator Assembly Groups

NOTE:

The above is a generic representation of a data card. For actual information related to this particular model, please refer to the "construction document" located at the end of this manual, or to the data cards affixed to the unit.

► Generator Model Number

This number is the key to numerous engineering and manufacturing details pertaining to your unit. Always supply this number when requesting service, ordering parts or seeking information.

► Identification Code

Use this code to obtain important information about the generator. For example, if the code is ...

**SD 100 - A 1 6 5.0 D 18 CB Y N C**

– identify the generator as follows:

- SD – Standby diesel generator ("SG" indicates a standby gaseous fuel unit).
- 100 – Rated output is 100,000 watts (100 kW).
- A – Voltage code (see "Voltage Codes" on this page).
- 1 – Indicates single-phase unit (3 – indicates three-phase unit).
- 6 – Indicates unit rated 60 Hertz (Hz) (5 – indicates 50 Hz).
- 5.0 – Engine is 5.0 liter (304 cubic inches).
- D – Unit has diesel fuel system ("N" indicates natural gas; "L" indicates LP Liquid Withdrawal; "V" indicates LP Vapor Withdrawal).
- 18 – Alternator rpm rating (1,800 rpm); "36" indicates 3,600 rpm.
- C – Unit has an option "C" control panel (option "D" and "E" panels also are available).
- B – Indicates a brushless unit ("D" indicates a direct excited unit with brushes and slip rings; "P" indicates a permanent magnet excitation).
- Y – Unit is equipped with a standard enclosure ("N" indicates no enclosure; "S" indicates unit has an acoustic enclosure).
- N – Unit does not have an exhaust muffler ("Y" indicates a muffler has been mounted; "L" indicates a muffler has been shipped loose with the unit).
- Y – Unit has a main line circuit breaker ("C" indicates unit has a UL-listed circuit breaker; "N" indicates no circuit breaker has been mounted).


► Groups and Assembly Numbers

The data card lists the groups and corresponding assembly numbers for each unit. The assembly numbers refer to exploded view drawing numbers that are applicable to the specific generator model. These drawings are located in the back half of this manual.


► Voltage Codes

The identification code letter following the unit's kilowatt rating is the generator's "voltage code." Any one of the following voltage codes may be listed.


- A – 120/240 volts, single-phase, four-lead, 60 Hz
- D – 120/240 volts, single- and three-phase, 12-lead, 60 Hz
- G – 120/208 volts, three-phase, 12-lead, 60 Hz Broad Range
- J – 120/240 volts, three-phase, 12-lead, 60 Hz Broad Range
- K – 277/480 volts, three-phase, 12-lead, 60 Hz Broad Range
- L – 346/600 volts, three-phase, six-lead, 60 Hz
- M – 110/220 volts, single-phase, four-lead, 50 Hz
- N – 115/200 volts, three-phase, 12-lead, 50 Hz Broad Range
- P – 100/200 volts, three-phase, 12-lead, 50 Hz Broad Range
- R – 231/400 volts, three-phase, 12-lead, 50 Hz Broad Range
- S – 277/480 volts, three-phase, six-lead, 50 Hz



### Identification Code Example

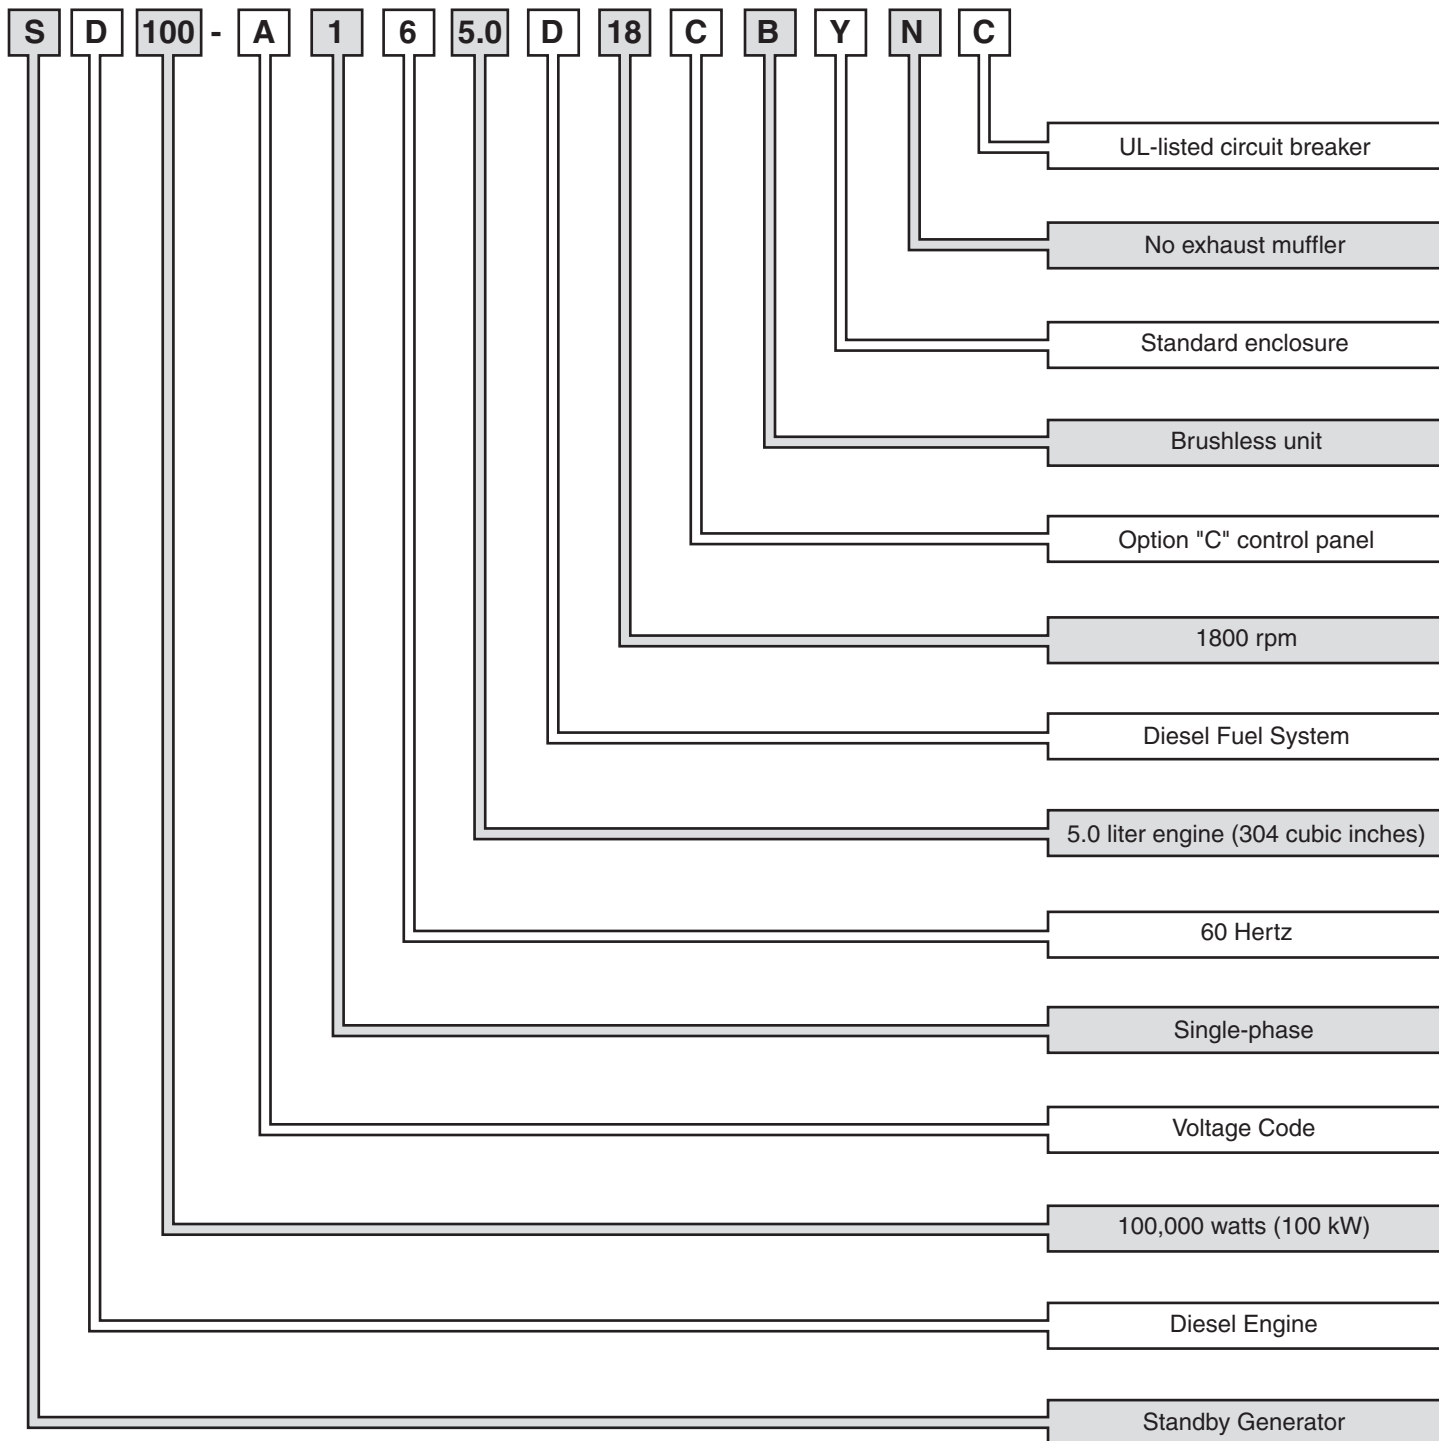

**Type Code Legend for Configured Transfer Switches**

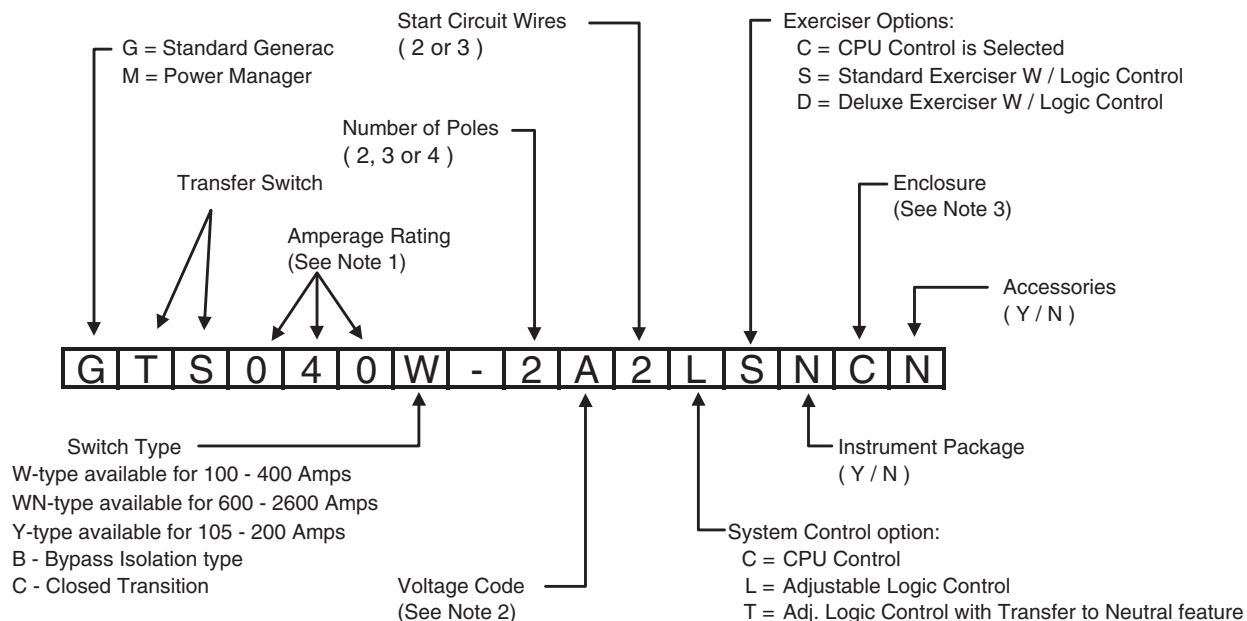

**Note 1:**

Switch amperage rating is displayed value multiplied by 10  
 e.g. 040 = 400 amps  
 260 = 2600 amps

**Note 2:**


**Voltage Code:**

- A** = 120 / 240 VAC (Single Phase / 3 Lead)
- D** = 120 / 240 VAC (Single or Three Phase / 12 Lead)  
 (Full capacity single or three phase; cannot be reconnected for 277/480V)
- G** = 120 / 208 VAC (Three Phase / 12 Lead)
- J** = 120 / 240 VAC (Three Phase / 12 Lead)
- K** = 277 / 480 VAC (Three Phase / 12 Lead)
- L** = 600 VAC (Three Phase / 3 Lead)
- M** = 110 / 220 VAC (Single Phase / 3 Lead)
- N** = 115 / 200 VAC (Single Phase / 12 Lead)
- P** = 100 / 200 VAC (Three Phase / 12 Lead) (Adjustable to 240V)
- R** = 231 / 400 VAC (Three Phase / 12 Lead) (Adjustable to 380V or 416V)
- S** = 480 VAC (Three Phase / 3 Lead)
- X** = Full Capacity All Voltages (Only with Direct Excitation)


**Note 3:**

**Enclosure:**

- A** = NEMA 1
- B** = NEMA 12
- C** = NEMA 3R
- D** = NEMA 12 W / Instrument Pkg.
- R** = NEMA 4 - Aluminum
- F** = NEMA 4X - Stainless Steel

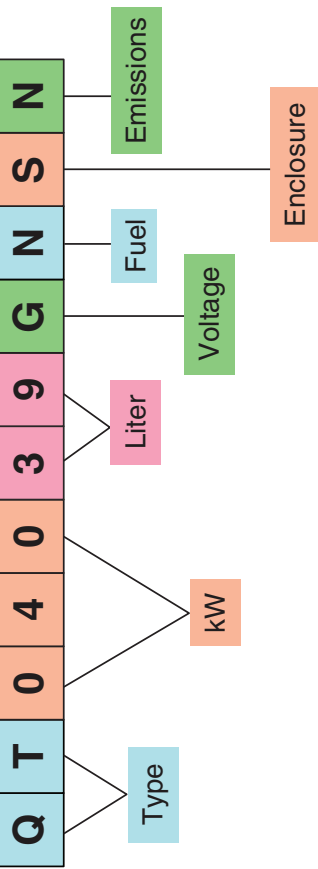


Breakdown for Model Number Description

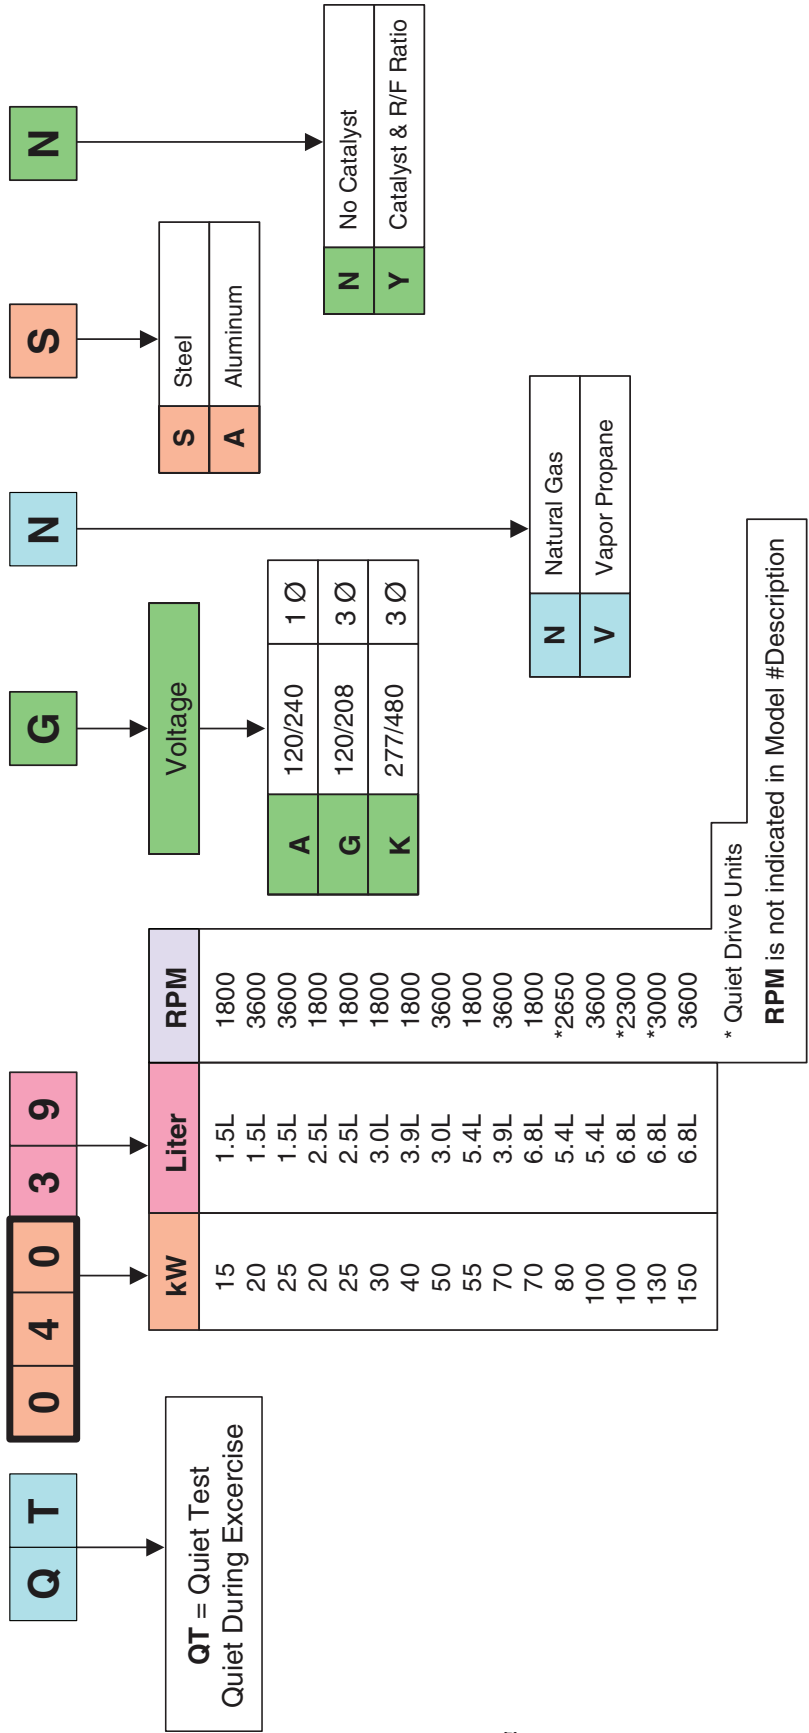


kW	Liter	RPM
15	1.5L	1800
20	1.5L	3600
25	1.5L	3600
20	2.5L	1800
25	2.5L	1800
30	3.0L	1800
40	3.9L	1800
50	3.0L	3600
55	5.4L	1800
70	3.9L	3600
80	6.8L	1800
100	5.4L	*2650
100	5.4L	3600
130	6.8L	*2300
130	6.8L	*3000
150	6.8L	3600

\* Quiet Drive Units  
**RPM** is not indicated in Model #Description

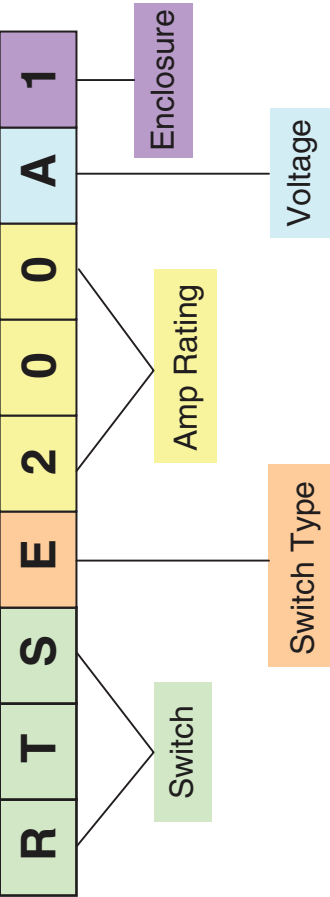


**Qt Line Transfer Switch Number Description**

**Breakdown for Model Number Description**

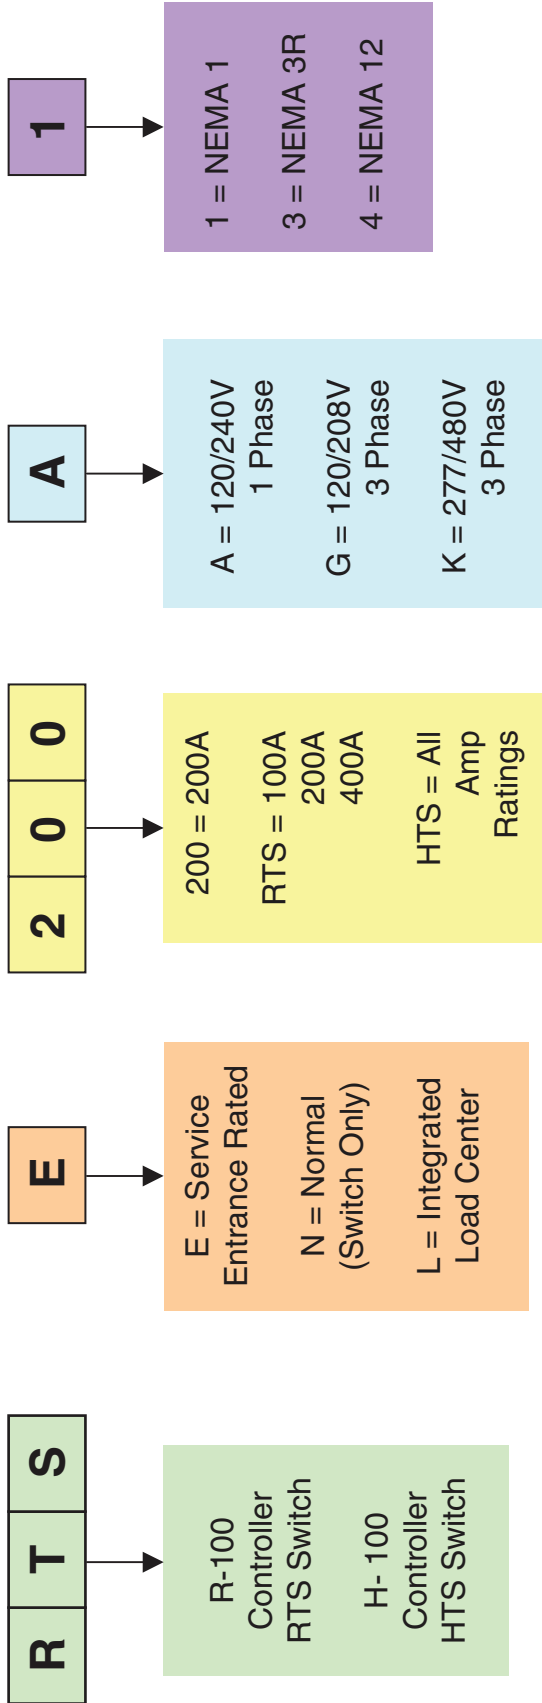



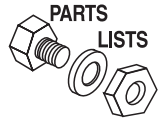

### Available Kits for Diesel Engine


1.0 ISM	07093900PM	7.1 DEUTZ	NO KIT AVAILABLE
1.3 ISM	NO KIT AVAILABLE	7.5 IVECO	09246100PM
2.2 ISUZU	NO KIT AVAILABLE	7.5 MITSUBISHI	0D570300PM
2.2 MAZDA	06705700PM	8.1 JOHN DEERE	NO KIT AVAILABLE
2.4 JOHN DEERE	NO KIT AVAILABLE	12.0 MITSUBISHI	0A539900PM
2.4 KIA	09695400PM	12.7 DETROIT	NO KIT AVAILABLE
2.6 HYUNDAI/MOBIS	NO KIT AVAILABLE	13.3 HINO	07681500PM
3.0 JOHN DEERE	NO KIT AVAILABLE	14.0 DETROIT	NO KIT AVAILABLE
3.0 KIA	0C292000PM	14.6 MITSUBISHI	0A375100PM
3.0 MAZDA	07087400PM	16.0 MITSUBISHI	0A539900PM
3.2 IVECO	NO KIT AVAILABLE	17.0 HINO	0C875000PM
3.3 DAEWOO	0C271000PM	18.0 DAEWOO	0D869000SM
3.9 MITSUBISHI	0D582500PM	18.5 MITSUBISHI	0A375100PM
4.0 HINO	06423800PM	22.0 DAEWOO	0D869000SM
4.3 LT6/7 GM	07447400PM	24.0 DETROIT	NO KIT AVAILABLE
4.5 JOHN DEERE	0A317700SM	24.5 MITSUBISHI	0A375300PM
4.8 DUETZ	NO KIT AVAILABLE	32.0 DETROIT	NO KIT AVAILABLE
5.0SI FORD/IVECO	09638300PM	33.9 MITSUBISHI	0A375400PM
5.0SII FORD/IVECO	09246000PM	37.0 MITSUBISHI	0A375500PM
5.0 HINO	NO KIT AVAILABLE	49.0D DETROIT	NO KIT AVAILABLE
6.4 HINO	05549500PM	49.0D MITSUBISHI	0A926800PM
6.8 JOHN DEERE	0A318000SM	65.4 MITSUBISHI	0A927000PM

### Available Kits for Gas Engine

1.0/1.2 NISSAN	07096500PM	3.9 CHRYSLER	0F212900PM
1.3 MAZDA	05230000PM	4.3 GM	0A379700PM
1.5 MITSUBISHI	0E260200PM	5.0 GM	08303400PM
1.6 FIAT	09739000PM	5.7 GM/PRE 2001	08303400PM
2.5 FORD	0F57260ESV	5.7 GM/POST2001	0C239800PM
2.5 GM	05836700SM	6.8 FORD	0D345400PM
2.6 MITSUBISHI	062445A0PM	7.4 GM	08303400PM
3.0 FORD	NO KIT AVAILABLE	8.1 GM	0C816600PM
3.0 GM	0A708300PM	13.3 HINO	08476100PM

### Available Kits for Air-cooled Engines

220 Single Cylinder	0D71060SRV
410 Single Cylinder	0C7107WSRV
410 Home Standby	0E35850SRV
480/570 V-Twin	0C7108WSRV
760/990 V-Twin Home Standby	0E1126DSRV
760/990 V-Twin Portable	0E11290SRV

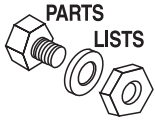

**Section 3 — CPL/QT Series Quick Reference Part**

**GENERAC® POWER SYSTEMS**

**Scheduled Maintenance Kits Available for CPL/QT Series Gensets**

<b>KW</b>	<b>ENGINE</b>	<b>AIR FLTR</b>	<b>OIL FLTR</b>	<b>PM KIT</b>	<b>ENGINE PART #</b>
20	1.5 MITSUBISHI	059402	0A45310244	0E260200PM	0A4531R
20	2.5 FORD	059402	0E7080	0F57260ESV	0E9618
25	2.5 FORD	059402	0E7080	0F57260ESV	0E9618
30	3.0 FORD	0C8127	0E7080	0E4599Q0SM	0E4599/0E4600
40	3.9 CHRYSLER	0F5418	0E7415	0E8336Q0SM	0E8336
50	3.0 FORD	0A4637	0E7080	0E4600Q0SM	0E4599/0E4600
55	5.4 FORD	0F5418	0D5419	0F1960Q0SM	0F1960
70	3.9 CHRYSLER	0F5418	0E7415	0E8336Q0SM	0E8336
70	6.8 FORD	0F5419	0D5419	0D3454Q0SM	0D3454
80	5.4 FORD	0F5419	0D5419	0D3454Q0SM	0F1960
100	5.4 FORD	0F5419	0D5419	0D3454Q0SM	0F1960
100	6.8 FORD	0F5419	0D5419	0D3454Q0SM	0D3454
130	6.8 FORD	0F5419	0D5419	0D3454Q0SM	0D3454
150	6.8 FORD	0F5419	0D5419	0D3454Q0SM	0D3454

**Cold Weather Kits Available for CPL/QT Series Gensets**

**P/N 0F61480SRV - KIT, COLD CPL DIRECT DRIVE (with 36" Battery Warmer)**

THIS KIT IS USED ON THE FOLLOWING QT SERIES: 15KW 1.5L \ 20KW 1.5L \ 25KW 2.5L \ 30KW 3.0L \ 40KW 3.9L \ 50KW 3.0L \ 55KW 5.4L \ 70KW 6.8L \ 80KW 5.4L \ 150KW 6.8L

**P/N 0F6148ASRV - KIT, COLD WEATHER CPL GEAR BOX (with 36" Battery Warmer)**


THIS KIT IS USED ON THE FOLLOWING QT SERIES: 100KW 6.8L \ 130KW 6.8L

**P/N 0F6148BSRV - KIT, COLD WEATHER CPL 1.5L (with 28" Battery Warmer and Block Heater)**

**P/N 0F6148CSRV - KIT, COLD WEATHER CPL 2.5L (with 28" Battery Warmer)**

**P/N 0F6148DSRV - KIT, COLD WEATHER AIR-COOLED (Battery Warmer)**

**P/N 0G18140SRV - KIT, COLD WEATHER CPL 2.4L**

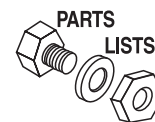

### Flex Fuel Line Available for CPL/QT Series Gensets

#### P/N OD3031 - FUEL LINE FLEX 3/4" OUTDOOR

THIS FLEX FUEL LINE IS USED ON THE FOLLOWING QT SERIES:

20KW 1.5L \ 25KW 2.5L \ 30KW 3.0L \ 40KW 3.9L \ 50KW 3.0L \ 55KW 5.4L \ 70KW 6.8L


#### P/N 061175 - FLEX FUEL LINE 1.25

THIS FLEX FUEL LINE IS USED ON THE FOLLOWING QT SERIES:

70KW 3.9L \ 80KW 5.4L \ 100KW 5.4L \ 130KW 6.8L \ 150KW 6.8L

### Block Heater Kits Available for CPL/QT Series Gensets

KIT P/N	HEATER	ENGINE	KW
0F6148BSRV	084918	1.5L	15
0F6148BSRV	084918	1.5L	20
0F6148BSRV	084918	1.5L	25
0G3063A	084918G	1.6L	20/25
0G3064	084918G	2.4L (Hyundai)	35
0G3065	084918G	2.4L (Mitsubishi)	45
0F8298	084918A	2.5L	25
0F8300	084918A	3.0L	30
0F8337	084918A	3.0L	50
0F8337	084918A	3.0L	60
0F8302	084918G	3.9L	40
0F8331	084918G	3.9L	70
0G6446S	084918G	4.2L	35/45
0G2144	084918D	4.6L	80
0F8304	084918D	5.4L	55
0F8332	084918D	5.4L	80
0F8333	084918D	5.4L	100
0G06230SRV	084918N	6.8L (John Deere)	Various
0F8306	084918G	6.8L	100
0F8306	084918G	6.8L	130
0F8336	084918G	6.8L	150

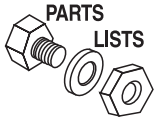

## Section 4 — Diesel Quick Reference Parts


GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 1.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> ISM	<b>ENGINE P/N:</b> 070939	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> NA	<b>COOLANT CAPACITY:</b> NA		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			07093900PM	
Oil/Fuel/Air			070939A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0709390126			
Oil Filter (Bypass)				
Fuel Filter	069858			
Air Filter	077078C	Canister		
Air Filter	070941	Molded Plastic		
V-Belt	046233			
Thermostat	0709390267			
Water Pump	0709390265			
Water Pump Gasket	0709390269	between Engine and Set Plate		
Water Pump Gasket	0709390272	between Set Plate and Water Pump		
Starter Motor	0709390134			
Glow Plug	0709390332			
<b>ADDITIONAL REFERENCE PARTS</b>				
Fuel Injector	0709390325			
Diagnostic Service Manual	082034			
Engine Parts Manual	010000D0PB			

<b>ENGINE SIZE:</b> 1.3 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> ISM	<b>ENGINE P/N:</b> 051786	<b>MODEL:</b> OBS
<b>OIL CAPACITY:</b> 5.0 quarts	<b>COOLANT CAPACITY:</b> 1.4 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
No Kits Available For This Engine				
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	053819			
Oil Filter (Bypass)				
Fuel Filter	OBSOLETE			
Air Filter	OBSOLETE			
V-Belt				
Thermostat	OBSOLETE			
Thermostat Gasket	054802			
Water Pump	OBSOLETE			
Water Pump Gasket	054839			
Starter Motor	OBSOLETE			
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				

Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

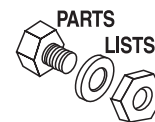

<b>ENGINE SIZE:</b> 2.2 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Mazda	<b>ENGINE P/N:</b> 067057	<b>MODEL:</b> Pre 1987
<b>OIL CAPACITY:</b> 5.3 quarts		<b>COOLANT CAPACITY:</b> 2.13 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
NA				
NA				
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0554410101			
Oil Filter (Bypass)				
Fuel Filter	055184			
Air Filter	0577780100			
V-Belt	058012			
Thermostat	OBSOLETE			
Thermostat Gasket	057750			
Water Pump	0554410294			
Water Pump Gasket	0554410297			
Starter Motor	0670570335			
Glow Plug	0670570332			
<b>ADDITIONAL REFERENCE PARTS</b>				
Control Unit	0670570362			
Service Manual	099342			
Parts Manual	022000D0PB			
Fuel Solenoid	079966	Fuel shutoff on injection pump		

<b>ENGINE SIZE:</b> 2.2 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Mazda	<b>ENGINE P/N:</b> 067057	<b>MODEL:</b> Post 1987
<b>OIL CAPACITY:</b> 5.3 quarts		<b>COOLANT CAPACITY:</b> 2.13 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			067057A0PM	
Oil/Fuel/Air (Plastic)			06705700PM	
Oil/Fuel/Air (Paper)			067057B0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0A86220296			
Oil Filter (Bypass)				
Fuel Filter	0670570363			
Air Filter	062784	Paper		
Air Filter	073912	Plastic		
V-Belt	036290			
Thermostat & Gasket	0670570103			
Thermostat Gasket	0670570102			
Water Pump	0670570310			
Water Pump Gasket	0670570312			
Starter Motor	0670570335			
Glow Plug	0670570332			
<b>ADDITIONAL REFERENCE PARTS</b>				
Control Unit	0670570362			
Timing Belt	0670570230			
Service Manual	099342			
Parts Manual	022000D0PB			
Injector	0670570269			



## Section 4 — Diesel Quick Reference Parts


GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 2.2 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Isuzu	<b>ENGINE P/N:</b> 0A8622	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 5.3 quarts		<b>COOLANT CAPACITY:</b> 1.25 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
NA				
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0A86220296			
Oil Filter (Bypass)				
Fuel Filter	0A86220297			
Air Filter Assembly	062780			
Air Filter Element	062784			
V-Belt	0A86220306	Cooling Fan		
Thermostat	0A86220304			
Thermostat Gasket	0A9100			
Water Pump	OBSOLETE			
Water Pump Gasket				
Starter Motor	0A86220353			
Glow Plug	OBSOLETE			
<b>ADDITIONAL REFERENCE PARTS</b>				
Service Manual	0C4768			

<b>ENGINE SIZE:</b> 2.4 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Kia	<b>ENGINE P/N:</b> 096954	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 7.0 quarts		<b>COOLANT CAPACITY:</b> 2.8 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Fuel Element		096954A0PM		
Oil/Fuel Element/Air		09695400PM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	099600			
Fuel Filter	098110	Assembly		
Fuel Filter	0642380325	Element		
Air Filter	073912			
V-Belt	058012	Delco Alternator		
V-Belt	0969540336	Generac Alternator		
Thermostat	0C29200268			
Thermostat Gasket	057750	square (top)		
Thermostat Gasket	097279	hexagonal (bottom)		
Water Pump	0969540332			
Water Pump Gasket	0554410297			
Starter Motor	0A1021			
Glow Plug	0969540339			
<b>ADDITIONAL REFERENCE PARTS</b>				
Fuse	067683	12 amp		
Fuse	067682B	14 amp		
Service Manual	0A3024			
Parts Manual	024000D0PB			


Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

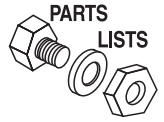

<b>ENGINE SIZE:</b> 2.4 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> John Deere	<b>ENGINE P/N:</b> 0E9894	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 6.9 quarts (w/filter)		<b>COOLANT CAPACITY:</b> 11.83 quarts		<b>User Notes</b> Maintenance Items Only	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0E98940291				
Oil Filter (Bypass)					
Fuel Filter	0E98940191				
Air Filter					
V-Belt	0E98940100				
Thermostat					
Thermostat Gasket					
Water Pump					
Water Pump Gasket					
Starter Motor					
Glow Plug					
<b>ADDITIONAL REFERENCE PARTS</b>					

<b>ENGINE SIZE:</b> 2.6 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Mobis	<b>ENGINE P/N:</b> 0F1704	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 5.7 quarts (w/filter)		<b>COOLANT CAPACITY:</b> 2.8 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0F17040317				
Oil Filter (Bypass)					
Fuel Filter (Assembly & Bracket)	0F17040100				
Fuel Filter (Element)	0F17040391				
Air Filter					
V-Belt	0F17040306				
Thermostat	0F17040299				
Thermostat Gasket	0F17040298				
Water Pump	0F17040300				
Water Pump Gasket	0F17040301				
Starter Motor	0F17040375				
Glow Plug	0F17040380				
<b>ADDITIONAL REFERENCE PARTS</b>					
Alternator	0F17040382				

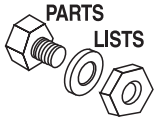

## Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 3.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Mazda	<b>ENGINE P/N:</b> 070874	<b>MODEL:</b> pre 1987
<b>OIL CAPACITY:</b> 6.0 quarts		<b>COOLANT CAPACITY:</b> 2.25 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			070874B0PM	
Oil/Fuel/Air Element			07087400PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0577780101			
Oil Filter (Bypass)				
Fuel Filter	0577780102	Spin On		
Air Filter	0577780100	Element Type		
V-Belt	058012			
Thermostat	0708740273			
Thermostat Gasket	057750			
Water Pump	0577780484	gaskets and o-rings sold separately*		
Water Pump Gasket	0577780470			
Starter Motor	057589			
Glow Plug	0577780482			
<b>ADDITIONAL REFERENCE PARTS</b>				
Water Separator	073848			
Fuel Solenoid	0577780393			
Service Manual	099341			
Parts Manual	030000D0PB			

0577780465 o-ring  
 0577780466 o-ring  
 0577780470 gasket  
 0708740272 gasket

\*please refer to engine parts manual

<b>ENGINE SIZE:</b> 3.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Mazda	<b>ENGINE P/N:</b> 070874	<b>MODEL:</b> post 1987
<b>OIL CAPACITY:</b> 6.0 quarts		<b>COOLANT CAPACITY:</b> 2.25 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			070874C0PM	
Oil/Fuel/Air			070874A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0577780101			
Oil Filter (Bypass)				
Fuel Filter	0670570363	Drop In		
Air Filter	073267	Molded Plastic		
V-Belt	058012			
Thermostat	0708740273			
Thermostat Gasket	057750			
Water Pump	0577780484	gaskets and o-rings sold separately*		
Water Pump Gasket	0577780470			
Starter Motor	057589			
Glow Plug	0577780482			
<b>ADDITIONAL REFERENCE PARTS</b>				
Water Separator	073848			
Fuel Solenoid	079966			
Service Manual	099341			
Parts Manual	030000D0PB			


0577780465 o-ring  
 0577780466 o-ring  
 0577780470 gasket  
 0708740272 gasket

\*please refer to engine parts manual




Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

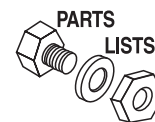

<b>ENGINE SIZE:</b> 3.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Kia	<b>ENGINE P/N:</b> 0C2920	<b>MODEL:</b> Nat. Asp
<b>OIL CAPACITY:</b> 6.3 quarts		<b>COOLANT CAPACITY:</b> 2.0 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Fuel Element		0C292000PM		
Oil/Fuel Element/Air		0C2920B0PM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0C29200215			
Oil Filter (Bypass)				
Fuel Filter	0642380325	Element		
Fuel Filter	098110	Assembly		
Air Filter	0C3427			
V-Belt	0C29200144			
Thermostat	0C29200268			
Thermostat Gasket	0C6960			
Water Pump	0C29200102	Includes gasket		
Water Pump Gasket	0C29200261			
Starter Motor	0C29200235			
Glow Plug	0C29200100			
<b>ADDITIONAL REFERENCE PARTS</b>				
Service Manual	0E7627			
Parts Manual	030000DPBK			
Water Pump Mounting Gasket	0C29200241			

<b>ENGINE SIZE:</b> 3.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Kia	<b>ENGINE P/N:</b> 0C2920	<b>MODEL:</b> Turbo
<b>OIL CAPACITY:</b> 6.3 quarts		<b>COOLANT CAPACITY:</b> 2.0 gallons		<b>User Notes</b> SM Kit for Verizon 0C2920D0PM
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Fuel		0C2920A0PM		
Oil/Fuel/Air		0C2920C0PM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	096701			
Oil Filter (Bypass)				
Fuel Filter	0642380325	Element		
Fuel Filter	098110	Assembly		
Air Filter	see below			
V-Belt	0C29200144			
Thermostat	0C29200268			
Thermostat Gasket	0C6960			
Water Pump	0C29200102			
Water Pump Gasket	0C29200261			
Starter Motor	0C29200235			
Glow Plug	0C29200100			
<b>ADDITIONAL REFERENCE PARTS</b>				
Service Manual	0E7627			
Parts Manual	030000DPBK			
Air Filter	0C3427	(Check BOM)		
Air Filter	065232	2-Stage (Check BOM)		

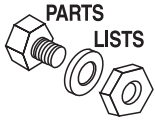

## Section 4 — Diesel Quick Reference Parts


GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 3.2 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Iveco	<b>ENGINE P/N:</b> 097504	<b>MODEL:</b> OBS
<b>OIL CAPACITY:</b> 7.0 quarts		<b>COOLANT CAPACITY:</b> 2.9 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
No Kits Available				
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	099163			
Oil Filter (Bypass)				
Fuel Filter	0975040295			
Air Filter	073267			
V-Belt	030955			
Thermostat	0975040110			
Thermostat Gasket	0963830334			
Water Pump	OBSOLETE			
Water Pump Gasket	0963830330			
Starter Motor	098879			
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Sedimentor	OBSOLETE			
Parts Manual	032000D0PB			

<b>ENGINE SIZE:</b> 3.3 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Daewoo	<b>ENGINE P/N:</b> 0C2710	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 6.9 quarts		<b>COOLANT CAPACITY:</b> 15.5 quarts		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			0C271000PM	
Oil/Fuel/Air			0C2710A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0C27100284			
Oil Filter (Bypass)				
Fuel Filter	0C27100411	Cartridge		
Air Filter	0C2725			
V-Belt	0C27100328			
Thermostat	0C27100306			
Thermostat Gasket	0C27100311			
Water Pump (old style)	0C27100319	used on serial # EBMOB 303279 and earlier		
Water Pump (new style)	0C2710A319	used on serial # EBMOB 306010 and later		
Water Pump Gasket	0C27100324			
Starter Motor	0C27100423			
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Air Heater	0C27100343			
Alternator	0C27100421			
Oil Temp Switch	053666			
Oil Level Sensor	0A8584			
Water Level Sensor	0G0725A			
Service Manual	0E6246			
Parts Manual	033000D0PB			


Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

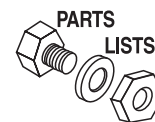

<b>ENGINE SIZE:</b> 3.9 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Mitsubishi	<b>ENGINE P/N:</b> OD5825	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 8.0 quarts		<b>COOLANT CAPACITY:</b> 4.75 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			OD582500PM	
Oil/Fuel/Air			OD5825A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	OD58250227			
Oil Filter (Bypass)				
Fuel Filter	OD58250250	Element		
Fuel Filter	OD58250251	Assembly		
Air Filter	090625			
V-Belt	OD58250477	Alternator		
Thermostat	OD58250481	Kit w/gasket		
Thermostat Gasket	0E2464			
Water Pump	OD58250476			
Water Pump Gasket	OD58250478	O-ring, not gasket		
Starter Motor	OD58250492			
Glow Plug	OD58250495			
<b>ADDITIONAL REFERENCE PARTS</b>				
Filter, Water Separator/Heat 12V	073847A	Element P/N 073847C		
Alternator	OD58250494			
Pump Assy, Inj Pump Fuel Feed	OD58250261			
Nozzle and Holder Assy	OD58250448			
Service Manual	0E7082			
Parts Manual	0E5226			

<b>ENGINE SIZE:</b> 4.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Hino	<b>ENGINE P/N:</b> 064238	<b>MODEL:</b> pre 1988
<b>OIL CAPACITY:</b> 11.8 quarts		<b>COOLANT CAPACITY:</b> 4.0 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			06423800PM	
Oil/Fuel/Air (Canister)			064238B0PM	
Oil/Fuel/Air (Molded Plastic)			064238C0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0642380524			
Oil Filter (Bypass)				
Fuel Filter	0642380325			
Air Filter	065234	Canister		
Air Filter	090749	Molded Plastic		
V-Belt	0642380418	set of two		
Thermostat	0642380355			
Thermostat Gasket	0642380352			
Water Pump	0642380366			
Water Pump Gasket		Tube Sealant, no Gasket		
Starter Motor	0642380414			
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Water Separator	0642380340			
Service Manual	092119			
Parts Manual	040000D0PB			

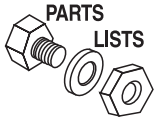

## Section 4 — Diesel Quick Reference Parts


GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 4.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Hino	<b>ENGINE P/N:</b> 064238	<b>MODEL:</b> post 1988
<b>OIL CAPACITY:</b> 11.8 quarts		<b>COOLANT CAPACITY:</b> 4.0 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			064238A0PM	
Oil/Fuel/Air (Canister)			064238D0PM	
Oil/Fuel/Air (Molded Plastic)			064238E0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0642380524			
Oil Filter (Bypass)				
Fuel Filter	0716960102			
Air Filter	065234	Canister		
Air Filter	090749	Molded Plastic		
V-Belt	0642380418	set of two		
Thermostat	0856770200			
Thermostat Gasket	0642380352			
Water Pump	0642380366			
Water Pump Gasket		Tube Sealant, no Gasket		
Starter Motor	0642380414	*check bill of material		
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Water Separator	0642380340			
Service Manual	092119			
Parts Manual	040000D0PB			

<b>ENGINE SIZE:</b> 4.3 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> GM	<b>ENGINE P/N:</b> 074474	<b>MODEL:</b> LT6 (obs)
<b>OIL CAPACITY:</b> 6.0 quarts		<b>COOLANT CAPACITY:</b> 2.8 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			074474A0PM	
Oil/Fuel/Air (*includes 2 Air Filters)			07447400PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	074473			
Oil Filter (Bypass)				
Fuel Filter	078003A			
Air Filter	073912	2 per engine*		
V-Belt	037793			
Thermostat	075885			
Thermostat Gasket	048665			
Water Pump	079175			
Water Pump Gasket	074491			
Starter Motor	OBSOLETEI			
Glow Plug	079193			
<b>ADDITIONAL REFERENCE PARTS</b>				
Remote Oil Filter	083829			
Starter Kit	0951830SRV			
Service Manual	093863			
Parts Manual	043000D0PB			

Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

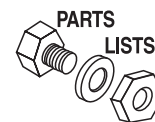

<b>ENGINE SIZE:</b> 4.3 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> GM	<b>ENGINE P/N:</b> 074475	<b>MODEL:</b> LT7 (obs)
<b>OIL CAPACITY:</b> 6.0 quarts		<b>COOLANT CAPACITY:</b> 2.8 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Fuel		074475A0PM		
Oil/Fuel/Air(*includes 2 Air Filters)		07447500PM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0A37970001			
Oil Filter (Bypass)				
Fuel Filter	078003A			
Air Filter	073912	2 per engine*		
V-Belt	037793			
Thermostat	075885			
Thermostat Gasket	048665			
Water Pump	079175			
Water Pump Gasket	074491			
Starter Motor	079196			
Glow Plug	079193			
<b>ADDITIONAL REFERENCE PARTS</b>				
Remote Oil Filter	083829			
Starter Kit	0951830SRV			
Service Manual	093863			
Parts Manual	043000D0PB			
Lower Hose	OBSOLETE			

<b>ENGINE SIZE:</b> 4.5 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> John Deere	<b>ENGINE P/N:</b> 0A3177	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> —		<b>COOLANT CAPACITY:</b> —		<b>User Notes</b> Maintenance Items Only
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Fuel		0A317700SM		
Oil/Fuel/Air		0A3177A0SM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0A31770238			
Oil Filter (Bypass)				
Fuel Filter	0A31770396			
Air Filter	065232			
V-Belt	0A31770444			
Thermostat				
Thermostat Gasket				
Water Pump				
Water Pump Gasket				
Starter Motor				
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Fuel Filter Mounting Kit	0A31770389	Does Not Include Filter		
Voltage Regulator				
Capacitor				
Starter Solenoid				
Starter Gasket				



## Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 5.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Ford/Iveco	<b>ENGINE P/N:</b> 096383	<b>MODEL:</b> SERIES ONE
<b>OIL CAPACITY:</b> 19.0 quarts		<b>COOLANT CAPACITY:</b> 4.0 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			09638300PM	
Oil/Fuel/Air (7 3/4" O.D.)			096383A0PM	
Oil/Fuel/Air (8 1/2" O.D.)			096383B0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	096770			
Oil Filter (Bypass)				
Fuel Filter	0670570363	2 per engine (SM Kits include two)		
Air Filter	090625	7-3/4" OD		
Air Filter	090749	8-1/2" OD		
V-Belt	095280	set of two		
Thermostat	0963830341			
Thermostat Gasket	0963830334			
Water Pump	0963830322			
Water Pump Gasket	0963830330			
Starter Motor	095281			
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Glass Bowl	096383A375			
Service Manual	020033			
Parts Manual	050000D0PB			


**1995 UNITS  
CONSULT FACTORY**

<b>ENGINE SIZE:</b> 5.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Ford/Iveco	<b>ENGINE P/N:</b> 092460	<b>MODEL:</b> SERIES TWO
<b>OIL CAPACITY:</b> 19.0 quarts		<b>COOLANT CAPACITY:</b> 4.0 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			09246000PM	
Oil/Fuel/Air (40/50/60/80 kW)			092460A0PM	
Oil/Fuel/Air (100 kW)			092460B0PM	
Oil/Fuel/Air (125 kW)			092460C0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	096701			
Oil Filter (Bypass)				
Fuel Filter	0670570363	2 per engine		
Air Filter	090749	40/50/60/80 kW		
Air Filter	089216	100 kW		
Air Filter	090625	125 kW		
V-Belt (set of two)	095280	(SM Kits include two) check BOM or 0A5747		
Thermostat	0963830341			
Thermostat Gasket	0963830334			
Water Pump	0924600155			
Water Pump Gasket	0924610173			
Starter Motor	095281			
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Fuse 15A X AGC 15	022676			
Relay Solenoid	056739			
Glass Bowl	096383A375			
Service Manual	020033			
Parts Manual	050002D0PB			

**ALL 1996 & 1997 UNITS  
1995 UNITS  
CONSULT FACTORY**


Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

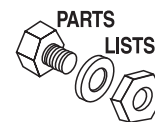

<b>ENGINE SIZE:</b> 6.4 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Hino	<b>ENGINE P/N:</b> 055495	<b>MODEL:</b> OBS
<b>OIL CAPACITY:</b> 14.8 quarts		<b>COOLANT CAPACITY:</b> 5.25 gallons		<b>User Notes</b> Head for Spin On Fuel Filter 0554950533 Whole Assembly 0554950610
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel - DROP IN			05549500PM	
Oil/Fuel - SPIN ON			055495A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0554950100			
Oil Filter (Bypass)				
Fuel Filter	0554950537	Drop In - pre 1988		
Fuel Filter	0716960102	Spin On - post 1988		
Air Filter	058763	80/100 kW		
Air Filter	073387	125kW		
Air Filter	076554	150kW		
Air Filter	090625	Plastic - 1992 and later		
V-Belt	0554950426	Set of 2		
Thermostat	0590890624			
Thermostat Gasket	0590890605			
Water Pump	0554950396			
Water Pump Gasket	0554950398			
Starter Motor	0554950442			
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Water Separator Element	073847E			
Filter / Water Separator	073847	Racor		
Starter Solenoid	0768150100			
Service Manual	0A8029			
Priming Pump	0554950470			

<b>ENGINE SIZE:</b> 6.8 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> John Deere	<b>ENGINE P/N:</b> 0A3180	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 18.0 quarts		<b>COOLANT CAPACITY:</b> 4.7 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			0A318000SM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0A31800101			
Oil Filter (Bypass)				
Fuel Filter	0A31800100			
Air Filter				
V-Belt	0A31800104			
Thermostat	0A31800102			
Thermostat Gasket	0A31800103			
Water Pump				
Water Pump Gasket				
Starter Motor				
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				

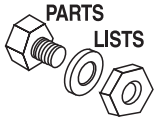

## Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS


<b>ENGINE SIZE:</b> 7.5 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Ford/Iveco	<b>ENGINE P/N:</b> 092461	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 5.8 gallons		<b>COOLANT CAPACITY:</b> 6.0 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			092461A0PM	
Oil/Fuel/Air			09246100PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	96701			
Oil Filter (Bypass)				
Fuel Filter	0670570363	2 per engine		
Air Filter	090625			
V-Belt	095280	set of two (check BOM)		
Thermostat	0963830341			
Thermostat Gasket	0924610165			
Water Pump	0924610172			
Water Pump Gasket	0924610173			
Starter Motor	095281			
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Starter Solenoid	056739			
V-belt	089176	1/2 x 57		
Injector Assy	OBSOLETE			
Alternator	050618	(see BOM 0A1232)		
Service Manual	020033			
Parts Manual	075000D0PB			

<b>ENGINE SIZE:</b> 7.5 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Mitsubishi	<b>ENGINE P/N:</b> 0D5703	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 3.0 gallons		<b>COOLANT CAPACITY:</b> 11.2 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel			0D570300PM	
Oil/Fuel/Air			0D5703A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0D57030309			
Oil Filter (Bypass)				
Fuel Filter	0D57030353	Element		
Air Filter	090625			
V-Belt	0D57030424	set of two - check bill of materials		
Thermostat	0D57030436	Kit with Gasket		
Thermostat Gasket	0D57030437			
Thermostat Gasket	0D57030280	case to cylinder head		
Water Pump	0D57030416			
Water Pump Gasket	0D57030422			
Starter Motor	0D57030463			
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Fuel Filter	0D57030354	Assembly		
Water Pump Kit	0D57030419	w/gasket		
Alternator	0D57030468			
Service Manual	0E7084			
Parts Manual	0D9727			
Thermostat Case Assembly	0D9260A			




## Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

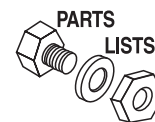

<b>ENGINE SIZE:</b> 12.0 Liter		<b>FUEL:</b> Diesel		<b>MAKE:</b> Mitsubishi		<b>ENGINE P/N:</b> 0A5399		<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 8.2 gallons				<b>COOLANT CAPACITY:</b> 10.6 gallons				<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>									
<b>Description</b>					<b>Part Number</b>				
Oil/Bypass/Fuel					0A539900PM				
Oil/Bypass/Fuel/Air					0A5399A0PM				
<b>COMMON REFERENCE PARTS</b>									
<b>Description</b>			<b>Part Number</b>			<b>Special Notes</b>			
Oil Filter (Main)			0A53990234						
Oil Filter (Bypass)			0A53990233						
Fuel Filter			0A53990244						
Air Filter			061701			check bill of materials			
V-Belt			0A53990276			Water Pump (check BOM)			
V-Belt			0A53990275			Alternator (check BOM)			
Thermostat			0A53990279			w/gaskets			
Thermostat Gasket			0A53990280						
Water Pump			0A53990274						
Water Pump Gasket			0A53990432						
Starter Motor*			0A53990292						
Glow Plug									
<b>ADDITIONAL REFERENCE PARTS</b>									
Element Kit			0A53990445			Main & Bypass Oil Filters			
Element, Oil Cooler			0A53990236						
Relay Solenoid 12 VDC			056739						
Service Manual			0C8222						
Parts Manual			012000DPBM						
<b>SCHEDULED MAINTENANCE KITS</b>									
<b>Description</b>					<b>Part Number</b>				
Oil/Bypass/Fuel/Air (Drop In Fuel - Post 1988)					07681500PM				
Oil/Bypass/Fuel/Air (Spin-on Fuel - Post 1988)					076815A0PM				
Oil/Bypass/Fuel (Drop In Fuel)					076815B0PM				
Oil/Bypass/Fuel (Spin-on Fuel)					076815C0PM				
Oil/Bypass/Fuel/Air (Drop In Fuel - Pre 1987)					076815D0PM				
Oil/Bypass/Fuel/Air (Spin-on Fuel - Pre 1987)					076815E0PM				
<b>COMMON REFERENCE PARTS</b>									
<b>Description</b>			<b>Part Number</b>			<b>Special Notes</b>			
Oil Filter (Main)			0590890101						
Oil Filter (Bypass)			0590890102						
Fuel Filter			0590890100			Drop In			
Fuel Filter			0667670100			Spin On			
Air Filter			060165			pre 1987			
Air Filter			061701			post 1988			
V-Belt			0768150290			Alternator			
V-Belt			0590890625			Water Pump (below 200 kW)			
V-Belt			079930			Water Pump (230/250/275 kW)			
Thermostat			0590890624						
Thermostat Gasket			0590890605						
Water Pump			0590890596						
Water Pump Gasket			0590890595						
Starter Motor			0590890785						
Glow Plug									
<b>ADDITIONAL REFERENCE PARTS</b>									
Water Separator			0642380340						
Fuel Feed Pump			0590890480						
Starter Solenoid			OBSOLETE						
Starter Solenoid			0768150100			post 1992			
Radiator Cap			0590890817						
Service Manual			0A8028						
Parts Manual			013300D0PB						

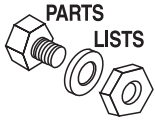

## Section 4 — Diesel Quick Reference Parts


GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 14.6 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Mitsubishi	<b>ENGINE P/N:</b> 0A3751	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 13.2 gallons		<b>COOLANT CAPACITY:</b> 22.42 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Bypass/Fuel			0A375100PM	
Oil/Bypass/Fuel/Air			0A3751A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0A37510100	2 per engine (SM kits contain 2)		
Oil Filter (Bypass)	0A37510101			
Fuel Filter	0A37510102			
Air Filter	0A4253			
V-Belt				
Thermostat				
Thermostat Gasket				
Water Pump				
Water Pump Gasket				
Starter Motor				
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				

<b>ENGINE SIZE:</b> 16.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Mitsubishi	<b>ENGINE P/N:</b> 0A8829	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 9.2 gallons		<b>COOLANT CAPACITY:</b> 22.4 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Bypass/Fuel			0A539900PM	
Oil/Bypass/Fuel/Air (single stage air)			0A882900PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0A53990234			
Oil Filter (Bypass)	0A53990233			
Fuel Filter	0A53990244			
Air Filter	0C1993	check BOM - could be 2-Stage (see * below)		
V-Belt	0A88290584	set of 2		
Thermostat	0A88290606	Kit (w/gaskets)		
Thermostat Gasket	0A88290263	Cover		
Water Pump	0A88290604			
Water Pump Gasket	0A88290284			
Starter Motor	0A88290275	to Aug 1999		
Starter Motor	0A88290431	from Sept 1999		
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Element Kit	0A53990445	Main & Bypass Oil Filters		
Fuel Filter Assembly	0A88290283			
Water Pump	0A88290593	Kit (w/gaskets)		
Water Pump Gasket	0A88290286	case to cover		
Service Manual	0C8222			
Parts Manual	016500D0PB			
*Optional Air Filter	0A5483	*2-Stage		


## Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

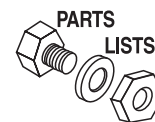

<b>ENGINE SIZE:</b> 17.0 Liter		<b>FUEL:</b> Diesel		<b>MAKE:</b> Hino		<b>ENGINE P/N:</b> 0C8750		<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 6.88 gallons				<b>COOLANT CAPACITY:</b> 26.9 gallons				<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>									
<b>Description</b>					<b>Part Number</b>				
Oil/Bypass/Fuel					0C875000PM				
Oil/Bypass/Fuel/Air					0C8750A0PM				
<b>COMMON REFERENCE PARTS</b>									
<b>Description</b>			<b>Part Number</b>			<b>Special Notes</b>			
Oil Filter (Main)			0C87500356						
Oil Filter (Bypass)			0C87500355						
Fuel Filter			0C87500474						
Air Filter			0A4253						
V-Belt									
Thermostat			0C87500501						
Thermostat Gasket			0C87500605						
Water Pump			0C87500482			Kit (w/gasket)			
Water Pump Gasket			0C87500533						
Starter Motor			0C87500544						
Glow Plug									
<b>ADDITIONAL REFERENCE PARTS</b>									
Thermostat			0C87500593			Kit (w/gasket)			
Repair Kit, Coolant Pump			0C87500592						
Service Manual			0D4336						
Parts Manual			0D4337						

<b>ENGINE SIZE:</b> 18.0 Liter		<b>FUEL:</b> Diesel		<b>MAKE:</b> Daewoo		<b>ENGINE P/N:</b> 0D8690		<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 7.13 gallons				<b>COOLANT CAPACITY:</b> 28.8 gallons				<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>									
<b>Description</b>					<b>Part Number</b>				
Oil/Fuel					0D869000SM				
Oil/Fuel/Air					0D8690A0SM				
<b>COMMON REFERENCE PARTS</b>									
<b>Description</b>			<b>Part Number</b>			<b>Special Notes</b>			
Oil Filter (Main)			0C46930269			2 per engine (SM kits contain 2)			
Oil Filter (Bypass)									
Fuel Filter			0C46930450						
Air Filter			0C1993			2 per engine (SM kits contain 2)			
V-Belt			0C46930357			set of 2 / 2 per engine			
V-Belt			0C46930467			set of 2			
Thermostat			0C46930330						
Thermostat Gasket			0C46930332						
Water Pump			0C46930333						
Water Pump Gasket			0C46930334						
Starter Motor			0C46930475						
Glow Plug									
<b>ADDITIONAL REFERENCE PARTS</b>									
Filter, Breather			0C46930174						
Radiator			0C46930479						
Radiator Site Glass			0C4693B479						
Radiator Cap			090283						
Service Manual			0D1074						
Parts Manual			0E4342						

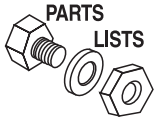

## Section 4 — Diesel Quick Reference Parts


GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 18.5 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Mitsubishi	<b>ENGINE P/N:</b> 0A3752	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 21.1 gallons		<b>COOLANT CAPACITY:</b> 29 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Bypass/Fuel		0A375100PM		
Oil/Bypass/Fuel/Air		0A3751A0PM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0A37510100	2 per engine (SM kits contain 2)		
Oil Filter (Bypass)	0A37510101			
Fuel Filter	0A37510102			
Air Filter	0A4253			
V-Belt	0A37520102			
Thermostat				
Thermostat Gasket				
Water Pump				
Water Pump Gasket				
Starter Motor				
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Water Pump Belt (1710)	0A37520101			
Fan Belt (1535)	0A37520103			
Fan Belt (1455)	0A37520104			

<b>ENGINE SIZE:</b> 22.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Daewoo	<b>ENGINE P/N:</b> 0C4693	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 11.1 gallons		<b>COOLANT CAPACITY:</b> 34.5 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Fuel		0C469300PM		
Oil/Fuel/Air		0C4693A0PM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0C46930269	2 per engine (SM kits contain 2)		
Oil Filter (Bypass)				
Fuel Filter	0C46930450			
Air Filter	0C1993	2 per engine (SM kits contain 2)		
V-Belt	0C46930357	set of 2 / 2 per engine		
V-Belt	0C46930467	set of 2		
Thermostat	0C46930330			
Thermostat Gasket	0C46930332			
Water Pump	0C46930333			
Water Pump Gasket	0C46930334			
Starter Motor	0C46930475			
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				
Filter, Breather	0C46930174			
Radiator	0C46930479			
Radiator Site Glass	0C4693B479			
Radiator Cap	090283			
Service Manual	0D1074			
Parts Manual	0D1075			

## Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

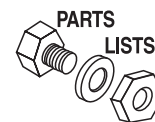

<b>ENGINE SIZE:</b> 24.5 Liter		<b>FUEL:</b> Diesel		<b>MAKE:</b> Mitsubishi		<b>ENGINE P/N:</b> 0A3753		<b>MODEL:</b> —			
<b>OIL CAPACITY:</b> 26.4 gallons				<b>COOLANT CAPACITY:</b> 35.4 gallons				<b>User Notes</b>			
<b>SCHEDULED MAINTENANCE KITS</b>											
<b>Description</b>					<b>Part Number</b>						
Oil/Bypass/Fuel					0A375300PM						
Oil/Bypass/Fuel/Air					0A3753A0PM						
<b>COMMON REFERENCE PARTS</b>											
<b>Description</b>			<b>Part Number</b>			<b>Special Notes</b>					
Oil Filter (Main)			0A37530100			2 per engine (SM kits contain 2)					
Oil Filter (Bypass)			0A37530101								
Fuel Filter			0A37510102			2 per engine (SM kits contain 2)					
Air Filter			0A4253								
<b>ENGINE SIZE:</b> 33.9		<b>FUEL:</b> Diesel		<b>MAKE:</b> Mitsubishi		<b>ENGINE P/N:</b> 0A3754		<b>MODEL:</b> —			
<b>OIL CAPACITY:</b> 31.7 gallons				<b>COOLANT CAPACITY:</b> 48.6 gallons				<b>User Notes</b>			
<b>SCHEDULED MAINTENANCE KITS</b>											
<b>Description</b>					<b>Part Number</b>						
Oil/Bypass/Fuel/Air					0A3754A0PM						
Oil/Bypass/Fuel					0A375400PM						
<b>COMMON REFERENCE PARTS</b>											
<b>Description</b>			<b>Part Number</b>			<b>Special Notes</b>					
Oil Filter (Main)			0A37510100			4 per engine (SM kits contain 4)					
Oil Filter (Bypass)			0A37530101								
Fuel Filter			0A37510102			2 per engine (SM kits contain 2)					
Air Filter			0A4253			2 per engine (SM kits contain 2)					
<b>ENGINE SIZE:</b> 37.0 Liter		<b>FUEL:</b> Diesel		<b>MAKE:</b> Mitsubishi		<b>ENGINE P/N:</b> 0A3755		<b>MODEL:</b> —			
<b>OIL CAPACITY:</b> 52.8 gallons				<b>COOLANT CAPACITY:</b> 72.3 gallons				<b>User Notes</b>			
<b>SCHEDULED MAINTENANCE KITS</b>											
<b>Description</b>					<b>Part Number</b>						
Oil/Bypass/Fuel					0A375500PM						
Oil/Bypass/Fuel/Air					0A3755A0PM						
<b>COMMON REFERENCE PARTS</b>											
<b>Description</b>			<b>Part Number</b>			<b>Special Notes</b>					
Oil Filter (Main)			0A37550100			4 per engine (SM kits contain 4)					
Oil Filter (Bypass)			0A37510101								
Fuel Filter			0A37510102			4 per engine (SM kits contain 4)					
Air Filter			0A4253			2 per engine (SM kits contain 2)					
<b>ENGINE SIZE:</b> 49.0 Liter		<b>FUEL:</b> Diesel		<b>MAKE:</b> Mitsubishi		<b>ENGINE P/N:</b> 0A9269		<b>MODEL:</b> —			
<b>OIL CAPACITY:</b> 47.6 gallons				<b>COOLANT CAPACITY:</b> 79.0 gallons				<b>User Notes</b>			
<b>SCHEDULED MAINTENANCE KITS</b>											
<b>Description</b>					<b>Part Number</b>						
Oil/Bypass/Fuel					0A926800PM						
Oil/Bypass/Fuel/Air					0A9268A0PM						
<b>COMMON REFERENCE PARTS</b>											
<b>Description</b>			<b>Part Number</b>			<b>Special Notes</b>					
Oil Filter (Main)			0A37530100			4 per engine (SM kits contain 4)					
Oil Filter (Bypass)			0A37530101								
Fuel Filter			0A37510102			4 per engine (SM kits contain 4)					
Air Filter			0A4253			2 per engine (SM kits contain 2)					
<b>ENGINE SIZE:</b> 65.4 Liter		<b>FUEL:</b> Diesel		<b>MAKE:</b> Mitsubishi		<b>ENGINE P/N:</b> 0A9270		<b>MODEL:</b> —			
<b>OIL CAPACITY:</b> 60.8 gallons				<b>COOLANT CAPACITY:</b> 109.1 gallons				<b>User Notes</b>			
<b>SCHEDULED MAINTENANCE KITS</b>											
<b>Description</b>					<b>Part Number</b>						
Oil/Bypass/Fuel					0A927000PM						
Oil/Bypass/Fuel/Air					0A9270A0PM						
<b>COMMON REFERENCE PARTS</b>											
<b>Description</b>			<b>Part Number</b>			<b>Special Notes</b>					
Oil Filter (Main)			0A37530100			4 per engine (SM kits contain 4)					
Oil Filter (Bypass)			0A37530101								
Fuel Filter			0A37510102			4 per engine (SM kits contain 4)					
Air Filter			0A4253			4 per engine (SM kits contain 4)					



## Section 4 — Diesel Quick Reference Parts


GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 22.0 Liter	<b>FUEL:</b> Diesel	<b>MAKE:</b> Doosan	<b>ENGINE P/N:</b> 0F9438	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 11.1 gal/42 liters (w/filter)		<b>COOLANT CAPACITY:</b> 9.5gal/36 liters		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Fuel		0F943800SM		
Oil/Fuel/Air		0F94380ASM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0F94380204			
Fuel Filter	0F94380348			
Air Cleaner Element	0F9050A	Standard		
Air Cleaner Element	0C1993	Heavy Duty		
V-Belt, Alternator	0F94380360			
Fan Belt	0F94380246			
Thermostat	0F94380235			
Thermostat Gasket	0F94380236			
Water Pump	0F94380237			
Starter Motor	0C46930475			
<b>ADDITIONAL REFERENCE PARTS</b>				
Alternator	0F94380359			

<b>ENGINE SIZE:</b> —	<b>FUEL:</b> —	<b>MAKE:</b> —	<b>ENGINE P/N:</b> —	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> —		<b>COOLANT CAPACITY:</b> —		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)				
Oil Filter (Bypass)				
Fuel Filter				
Air Filter				
V-Belt				
Thermostat				
Thermostat Gasket				
Water Pump				
Water Pump Gasket				
Starter Motor				
Glow Plug				
<b>ADDITIONAL REFERENCE PARTS</b>				


Section 4 — Diesel Quick Reference Parts

GENERAC® POWER SYSTEMS

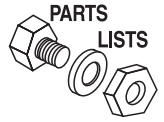

<i>ENGINE SIZE:</i> —	<i>FUEL:</i> —	<i>MAKE:</i> —	<i>ENGINE P/N:</i> —	<i>MODEL:</i> —	
<i>OIL CAPACITY:</i> —		<i>COOLANT CAPACITY:</i> —		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<i>Description</i>			<i>Part Number</i>		
<b>COMMON REFERENCE PARTS</b>					
<i>Description</i>	<i>Part Number</i>	<i>Special Notes</i>			
Oil Filter (Main)					
Oil Filter (Bypass)					
Fuel Filter					
Air Filter					
V-Belt					
Thermostat					
Thermostat Gasket					
Water Pump					
Water Pump Gasket					
Starter Motor					
Glow Plug					
<b>ADDITIONAL REFERENCE PARTS</b>					

<i>ENGINE SIZE:</i> —	<i>FUEL:</i> —	<i>MAKE:</i> —	<i>ENGINE P/N:</i> —	<i>MODEL:</i> —	
<i>OIL CAPACITY:</i> —		<i>COOLANT CAPACITY:</i> —		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<i>Description</i>			<i>Part Number</i>		
<b>COMMON REFERENCE PARTS</b>					
<i>Description</i>	<i>Part Number</i>	<i>Special Notes</i>			
Oil Filter (Main)					
Oil Filter (Bypass)					
Fuel Filter					
Air Filter					
V-Belt					
Thermostat					
Thermostat Gasket					
Water Pump					
Water Pump Gasket					
Starter Motor					
Glow Plug					
<b>ADDITIONAL REFERENCE PARTS</b>					

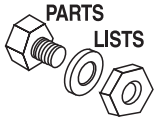

## Section 5 — Gas Quick Reference Parts

GENERAC® POWER SYSTEMS


<b>ENGINE SIZE:</b> 1.0 / 1.2 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Nissan	<b>ENGINE P/N:</b> 069828 / 070965	<b>MODEL:</b> OBS
<b>OIL CAPACITY:</b> 3.0 quarts	<b>COOLANT CAPACITY:</b> 2.5 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel/Air			07096500PM	
Oil/Fuel			070965A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	075755			
Fuel Filter	074016			
Air Filter	073912			
V-Belt	043776	3/8 x 32-1/4 <b>CONSULT FACTORY</b> (check BOM)		
V-Belt	079173	3/8 x 36-5/8 1.2L <b>CONSULT FACTORY</b> (check BOM)		
Thermostat	0698280503			
Thermostat Gasket	0698280506			
Water Pump	0709650146	Assembly (w/gasket)		
Water Pump Gasket	0698280501			
Starter Motor	070954			
Ignition Coil	072557			
Spark Plug	0698280296	4 per engine		
<b>ADDITIONAL REFERENCE PARTS</b>				
Tune Up Kit	0820360SRV			
Spark Plug Wires	0698280355			
Contact Set	0698280320			
Brush and Spring Kit	OBSOLETE			
Distributor Rotor	0698280314			
Distributor Cap	0698280315			
Distributor Points	0698280316			
DistributorCondensor	0698280307			
Service Manual	082033			
Parts Manual	010000G0PB			

<b>ENGINE SIZE:</b> 1.3 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Mazda	<b>ENGINE P/N:</b> 051782	<b>MODEL:</b> OBS
<b>OIL CAPACITY:</b> 3.2 quarts	<b>COOLANT CAPACITY:</b> 2.2 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel/Air			05230000PM	
Oil/Fuel			052300A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	052241			
Oil Filter (Bypass)				
Fuel Filter	029608			
Air Filter	059402			
V-Belt	039379	3/8 x 32-3/4		
Thermostat	052927			
Thermostat Gasket	056958			
Water Pump	052908			
Water Pump Gasket	OBSOLETE			
Starter Motor	052449			
Spark Plug	0698280296	4 per engine		
<b>ADDITIONAL REFERENCE PARTS</b>				
Spark Plug Wires	052966			
Water Pump Gasket	OBSOLETE			
Coil Wire	066049			
Ignition Coil	OBS			
Distributor Rotor	052473			
Distributor Cap	052471			
Distributor Points	OBSOLETE			
DistributorCondensor	OBSOLETE			
Parts Manual	013000G0PB			



Section 5 — Gas Quick Reference Parts


GENERAC® POWER SYSTEMS

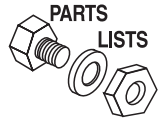

<b>ENGINE SIZE:</b> 1.5 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Mitsubishi	<b>ENGINE P/N:</b> 0A4531	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 4.0 quarts		<b>COOLANT CAPACITY:</b> 2.0 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Air			0E260200PM		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0A45310244				
Oil Filter (Bypass)					
Fuel Filter					
Air Filter	059402				
V-Belt	0A5275	1800 RPM			
V-Belt	0A5586	3600 RPM			
Thermostat	075885				
Thermostat Gasket	0A5554	Seal Ring			
Water Pump	0A45310247				
Water Pump Gasket		no gasket			
Starter Motor	020692				
Spark Plug	0A45310275	4 per engine			
<b>ADDITIONAL REFERENCE PARTS</b>					
Spark Plug Wires	0A45310272				
Distributor Cap	0A45310261				
Distributor Rotor	0A45310264				
PCV Valve	0A45310105				
Valve Timing Belt	0A45310199				
Service Manual	0C1947				
Parts Manual	015000G0PB				

<b>ENGINE SIZE:</b> 1.6 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Fiat	<b>ENGINE P/N:</b> 097390	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 4.5 quarts		<b>COOLANT CAPACITY:</b> 2.0 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Air			09739000PM		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	099021				
Oil Filter (Bypass)					
Fuel Filter					
Air Filter	073912				
V-Belt	020621	1800 RPM			
V-Belt	020439	3600 RPM			
Thermostat	0973900247	OBS - use kit p/n 0F75540SRV			
Thermostat Gasket	098907				
Water Pump	OBSOLETE				
Water Pump Gasket	0973900261				
Starter Motor	070954	check BOM			
Spark Plug	0698280296	4 per engine			
<b>ADDITIONAL REFERENCE PARTS</b>					
Spark Plug Wires	0973900275	OBS - use 0A45310272			
Distributor Cap	OBSOLETE				
Distributor Rotor	OBSOLETE				
Ignition Coil	072557				
Ignition Coil Wire	098852				
Water Pump Belt	075130				
Water Tube Gasket	099478				
Timing Belt	0973900182				
Hi Temp Switch	0973900250				
Oil Pressure Switch	0973900235	OBS - please see side notes			
Service Manual	0A1368				
Parts Manual	016000G0PB				

Oil Pressure Switch:  
 • for units built 1997 and before, use p/n 060108  
 • for units built 1998 and later use p/n 0A8584

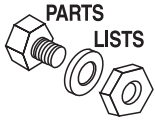

## Section 5 — Gas Quick Reference Parts


GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 1.6 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Chery	<b>ENGINE P/N:</b> 0G0207	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 0.875 gallons (w/filter)		<b>COOLANT CAPACITY:</b> 2.25 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Air			0G020700SM		
-			-		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0E7080				
Fuel Filter					
Air Cleaner Element	059402				
V-Belt	0G0823				
Thermostat	0G02070164				
Thermostat Gasket	0G02070166	May need clip			
Thermostat Clip	0G02070165				
Water Pump	0G02070206				
Water Pump Gasket	0G02070207				
Starter Motor	See Note	order (1) 0G7461RWK and (1) 0G0860			
Spark Plug	0E7585				
Spark Plug Wire Set	0G02070103A				
<b>ADDITIONAL REFERENCE PARTS</b>					
Alternator	0A1354B				

<b>ENGINE SIZE:</b> 2.4 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Hyundai	<b>ENGINE P/N:</b> 0F8922	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 4.0 quarts (w/filter)		<b>COOLANT CAPACITY:</b> 7.2 quarts		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Air/Oil/Spark Plugs			0G04660ESV		
-			-		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0A86220296				
Oil Filter (Bypass)					
Fuel Filter					
Air Cleaner Element	0C8127				
V-Belt, Serpentine	0D3488Q				
Thermostat	0F89220112				
Thermostat Gasket	0F89220113				
Water Pump	0F89220106				
Water Pump Gasket	0F89220107				
Starter Motor	See Note	order (1) 0G7461RWK and (1) 0G0860			
Spark Plug	0698280296				
<b>ADDITIONAL REFERENCE PARTS</b>					

Section 5 — Gas Quick Reference Parts

GENERAC® POWER SYSTEMS

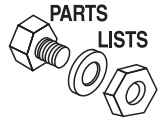

<b>ENGINE SIZE:</b> 2.4 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Mitsubishi	<b>ENGINE P/N:</b> 0G1008	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 1.125 gallons (w/filter)		<b>COOLANT CAPACITY:</b> 1.80 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Air/Oil/Spark Plugs			0G3510WSRV		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0A45310244				
Oil Filter (Bypass)					
Fuel Filter					
Air Filter	0C8127				
V-Belt	0G0952				
Thermostat	0G10080276				
Thermostat Gasket					
Water Pump	0G10080264				
Water Pump Gasket	0G10080265				
Starter Motor	See Note	order (1) 0G7461RWK and (1) 0G0860			
Spark Plug	0G10080292				
<b>ADDITIONAL REFERENCE PARTS</b>					

<b>ENGINE SIZE:</b> 2.5 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> GM	<b>ENGINE P/N:</b> 058367	<b>MODEL:</b> OBS	
<b>OIL CAPACITY:</b> —		<b>COOLANT CAPACITY:</b> —		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Fuel			05836700SM		
Oil/Fuel/Air			058367A0SM		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	055505				
Oil Filter (Bypass)					
Fuel Filter	053244				
Air Filter	044088				
V-Belt					
Thermostat					
Thermostat Gasket					
Water Pump Gasket	048665				
Starter Motor					
Spark Plug					
<b>ADDITIONAL REFERENCE PARTS</b>					



## Section 5 — Gas Quick Reference Parts


GENERAC® POWER SYSTEMS

<b>ENGINE SIZE:</b> 2.5 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Ford	<b>ENGINE P/N:</b> 0E9618	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 4.5 quarts w/filter		<b>COOLANT CAPACITY:</b> —		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Air			0F57260ESV		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0E7080				
Fuel Filter	-				
Air Filter	059402				
V-Belt	0D3488B	Serpentine			
Thermostat	0E96180237				
Thermostat Gasket	0E96180231				
Water Pump	0E96180232				
Water Pump Gasket	0E96180233				
Starter Motor	See Note	order (1) 0G7461RWK and (1) 0G0860			
Ignition Coil	0E96180239				
Spark Plug	0E96180241				
Spark Plug Wire	0E96180240	Set with Bracket			
<b>ADDITIONAL REFERENCE PARTS</b>					
Carburetor	0E1028				
Carburetor Gasket	059401				
Alternator	0E9868				
Oil Pressure Switch	0A8584				
Water Sensor	0G0728				
Temperature Switch	0A6751				
Dipstick and Tube	0E9738				
Service Manual	0E9693				
Parts Manual	0F0136				

<b>ENGINE SIZE:</b> 2.6 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Mitsubishi	<b>ENGINE P/N:</b> 062245A	<b>MODEL:</b> OBS	
<b>OIL CAPACITY:</b> 4.2 quarts		<b>COOLANT CAPACITY:</b> 2.4 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Fuel			062445A0PM		
Oil/Fuel/Air			062445AAPM		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	052241				
Fuel Filter	053244				
Air Filter	062780				
Air Filter	062784	Element Only			
V-Belt	062245A285				
V-Belt	066672	Fan			
V-Belt	040080	Governor			
Thermostat	062245A340				
Thermostat Gasket	062575				
Water Pump (pre-1987 units)	062245A289	Assy (w/gasket)			
Water Pump (1987 and later)	0732850172	Assy (w/gasket)			
Water Pump	0732850172	High Speed Engine P/N 073285			
Water Pump Gasket	062245A290				
Starter Motor	062574				
Spark Plug	062245A392	4 per engine			
<b>ADDITIONAL REFERENCE PARTS</b>					
Spark Plug Wires	062245A387				
Ignition Coil	062245A398				
Ignition Coil Wire	062245A394				
Distributor Cap	OBSOLETE	Screw Type			
Distributor Cap	062245A407	Clip Type			
Distributor Rotor	062245A343				
Carburetor	053959				
Carburetor Repair Kit	053959R				
Water Pump & Gasket Kit	0732850172	for units built after 1987 / high speed engine			
Service Manual	066735				

Section 5 — Gas Quick Reference Parts

GENERAC® POWER SYSTEMS

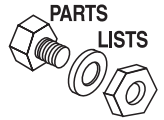

<b>ENGINE SIZE:</b> 3.0 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> GM	<b>ENGINE P/N:</b> CONSULT FACTORY	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 4.0 quarts		<b>COOLANT CAPACITY:</b> 2.0 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Air		0A708300PM		
Oil/Fuel		0A7083A0PM		
Oil/Fuel/Air		0A7083B0PM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	055505			
Oil Filter (Bypass)				
Fuel Filter	053244			
Air Filter	073267			
V-Belt				
Thermostat	0887780195			
Thermostat Gasket	0887780196			
Water Pump	0887780113			
Water Pump Gasket	0887780109			
Starter Motor	081258A	OBSOLETE		
Spark Plug	0887780229	4 per engine		
<b>ADDITIONAL REFERENCE PARTS</b>				
Distributor Cap	0887780215			
Distributor Rotor	0887780216			
Spark Plug Wires	0887780249	Set		
Ignition Module	0887780222			
Ignition Coil	0887780247			
Ignition Coil Wire	0887780248			
Service Manual	0E8187			
Parts Manual	030000G0PB			

<b>ENGINE SIZE:</b> 3.0 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Ford	<b>ENGINE P/N:</b> 0E4599/0E4600	<b>MODEL:</b> —
<b>OIL CAPACITY:</b> 5.0 quarts		<b>COOLANT CAPACITY:</b> 3.0 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Air/Oil/Spark Plugs		0F572700PM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0E7080			
Oil Filter (Bypass)				
Fuel Filter				
Air Filter	0C8127			
V-Belt	0D3488B	check BOM		
Thermostat				
Thermostat Gasket				
Water Pump				
Water Pump Gasket				
Starter Motor	0E6729RWK			
Spark Plug	0E7079			
<b>ADDITIONAL REFERENCE PARTS</b>				
Service Manual	0E9267			
Distributor	0E6203	Does not include rotor or cap		
Ignition Cap	0E6203A			
Ignition Rotor	0E6203B			
Ignition Coil	0E6203C			
Wire Set	0E6203D			
Ignition Module	0E6203E			



## Section 5 — Gas Quick Reference Parts

GENERAC® POWER SYSTEMS


<b>ENGINE SIZE:</b> 3.0 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Ford Duratech	<b>ENGINE P/N:</b> 0F9765	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 1.0 gallons (w/filter)		<b>COOLANT CAPACITY:</b> 4.0 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Air			NA		
-			-		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0D5419				
Fuel Filter	NA				
Air Cleaner Element	0F5418				
V-Belt	0D3488N	Serpentine			
Thermostat	075885				
Thermostat Gasket	048665				
Water Pump	0F9225				
Starter Motor	See Note	order (1) 0G7461RWK and (1) 0G0860			
Spark Plug	0F97650226				
<b>ADDITIONAL REFERENCE PARTS</b>					
Alternator	0E9868A				
Ignition Coil	0F9228				

<b>ENGINE SIZE:</b> 3.9 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Chrysler	<b>ENGINE P/N:</b> 0E8336	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 4.0 quarts		<b>COOLANT CAPACITY:</b> 5.0 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Air/Oil/Spark Plugs			0F212900PM		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0E7415				
Oil Filter (Bypass)					
Fuel Filter					
Air Filter	0A46370SRV				
V-Belt	0D3488A	Serpentine 70"			
Thermostat	0E83360260	195° (use P/N 075885)			
Thermostat Gasket	0E7841	Adapter Gasket, 2 required			
Water Pump	0E83360232	* see User Notes →			
Water Pump Gasket	0E83360233				
Starter Motor	0E6729RWK				
Spark Plug	0E83360249				
<b>ADDITIONAL REFERENCE PARTS</b>					
Alternator, DC	0A1232A				
Distributor Cap	0E83360242				
Distributor Rotor	0E83360243				
Wire Set	0E83360248				
Ignition Coil	0E7953				
Ignition Coil Cable	0E7954				
Magnetic Pick Up	0D2244M				
Service Manual	0E9755				
Parts Manual	0E9855				
Block Heater Kit	0F15100SRV				

\* If customer needs 5/8" plug expansion, check local hardware store


Section 5 — Gas Quick Reference Parts

GENERAC® POWER SYSTEMS

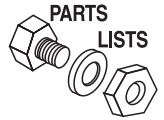

<b>ENGINE SIZE:</b> 4.3 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> GM	<b>ENGINE P/N:</b> CONSULT FACTORY	<b>MODEL:</b> —
<i>OIL CAPACITY:</i> 4.5 quarts		<i>COOLANT CAPACITY:</i> 4.5 gal (SG035/045/075) or 5.0 gal (SG060)		
<b>User Notes</b>				
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Air		0A379700PM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0A37970001			
Fuel Filter				
Air Filter	0A46370SRV	11-1/2" x 3-1/2"		
V-Belt	0A5264			
Thermostat	075885			
Thermostat Gasket	0A2440			
Water Pump	0A37970120	Kit (w/gasket)		
Water Pump Gasket	0758720177			
Starter Motor	059056ASRV			
Spark Plug	0A37970172			
<b>ADDITIONAL REFERENCE PARTS</b>				
Distributor	0A37970224			
Distributor Cap	0A37970201			
Distributor Pick Up Coil	0A37970191			
Distributor Ignition Module	0A37970193			
Distributor Rotor	0A37970195			
Ignition Coil	0A37970198			
Gasket, Water Pump Cover	0A37970219			
Spark Plug Wires	0A4277			
Belt, Serpentine	0A4278B	77" LG		
Bolt, Starter	058385A	4-1/4" / Qty 2 required		
Parts Manual	0D3749			
Service Manual	0C8220			

<b>ENGINE SIZE:</b> 5.0 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> GM	<b>ENGINE P/N:</b> 075872	<b>MODEL:</b> OBS
<i>OIL CAPACITY:</i> 5.0 quarts		<i>COOLANT CAPACITY:</i> 5.0 gallons		
<b>User Notes</b>				
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>		<b>Part Number</b>		
Oil/Fuel/Air		08303400PM		
Oil/Fuel		083034A0PM		
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	055505			
Oil Filter (Bypass)				
Fuel Filter	029608			
Air Filter	060834			
V-Belt, Governor	066005	Natural & LP Gas Units		
V-Belt, Governor	035736	Gasoline Units		
V-Belt, Alternator	059324			
Thermostat	0758720283	1991		
Thermostat	075885	1992-1994		
Thermostat Gasket	0887780196			
Water Pump	0758720173			
Water Pump Gasket	0758720177	2 required		
Starter Motor	059056ASRV			
Spark Plug	059503	8 per engine		
<b>ADDITIONAL REFERENCE PARTS</b>				
Spark Plug Wires	055490			
Gasket, Water Pump Cover	0758720176			
Distributor Cap	0758720218			
Distributor Rotor	0758720221			
Bolt, Starter	058385A	4-1/4" / Qty 2 required		
Service Manual	0E7738			
Parts Manual	050000G0PB			

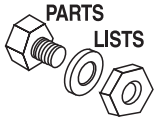

## Section 5 — Gas Quick Reference Parts

GENERAC® POWER SYSTEMS


<b>ENGINE SIZE:</b> 5.7 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> GM	<b>ENGINE P/N:</b> 083034	<b>MODEL:</b> pre 2001
<b>OIL CAPACITY:</b> 5.0 quarts		<b>COOLANT CAPACITY:</b> 5.0 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Fuel/Air			08303400PM	
Oil/Fuel			083034A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	055505			
Oil Filter (Bypass)				
Fuel Filter	029608			
Air Filter	060834			
V-Belt, Governor	066005	Natural & LP Gas Units		
V-Belt, Governor	035736	Gasoline Units		
V-Belt, Alternator	059324			
Thermostat	0758720283	1991		
Thermostat	075885	1992-1994		
Water Pump	0758720173	includes two gaskets		
Water Pump Gasket	0758720177	2 required		
Starter Motor	059056ASRV			
Spark Plug	059503	8 per engine		
<b>ADDITIONAL REFERENCE PARTS</b>				
Thermostat Gasket	048665			
Spark Plug Wires	055490			
Distributor Cap	0758720218			
Distributor Rotor	0758720221			
Bolt, Starter	058385A	4-1/4" / Qty 2 required		
Service Manual	0E7738			
Parts Manual	057000G0PB			

<b>ENGINE SIZE:</b> 5.7 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> GM	<b>ENGINE P/N:</b> 0C2398	<b>MODEL:</b> post 2001
<b>OIL CAPACITY:</b> 5.0 quarts		<b>COOLANT CAPACITY:</b> 5.0 gallons		<b>User Notes</b>
<b>SCHEDULED MAINTENANCE KITS</b>				
<b>Description</b>			<b>Part Number</b>	
Oil/Air (Air Filter p/n 0D5420)			0C239800PM	
Oil/Air (Air Filter p/n 0C3197)			0C2398A0PM	
<b>COMMON REFERENCE PARTS</b>				
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>		
Oil Filter (Main)	0C3784			
Oil Filter (Bypass)				
Fuel Filter				
Air Filter	0C3197	(check BOM)		
Belt, Serpentine	0A4278A or 0A4278B	72.5" (check BOM)		
Belt, Serpentine	0C9617	72.44"		
Thermostat	0C23980102	Kit (w/gaskets)		
Thermostat Gasket	0A2440			
Water Pump	0A37970120	includes gasket		
Water Pump Gasket				
Starter Motor	059056ASRV			
Spark Plug	0A37970172	8 per engine		
<b>ADDITIONAL REFERENCE PARTS</b>				
Distributor Cap	0C23980100			
Distributor Rotor	0C23980101			
Bolt, Starter	058385A	4-1/4" / Qty 2 required		
Service Manual	0E7738			
Parts Manual	TBA			




Section 5 — Gas Quick Reference Parts

GENERAC® POWER SYSTEMS

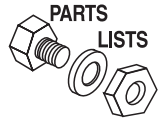

<b>ENGINE SIZE:</b> 6.8 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Ford	<b>ENGINE P/N:</b> 0D3454	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 7.0 quarts		<b>COOLANT CAPACITY:</b> 6.3 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Air			0D345400PM		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0D5419				
Oil Filter (Bypass)					
Fuel Filter					
Air Filter	0F5419				
Belt, Serpentine	0D3488	Direct Drive Units			
Belt, Serpentine	0D3488A	Gear Box Units			
Thermostat	0D34540238	Assy with Seal			
Thermostat Gasket	0D34540235	o-ring			
Water Pump	0D34540232				
Water Pump Gasket	0D34540233	Seal			
Starter Motor	0D5418				
Spark Plug	0D34540186				
<b>ADDITIONAL REFERENCE PARTS</b>					
Coil and Boot Assy, Ignition	0D34540249				
Ignition Module	0F20430SRV				
Service Manual	0E7083				
Parts Manual	0E6478				
Block Heater Option	084918C	or 084918D			

<b>ENGINE SIZE:</b> 7.4 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> GM	<b>ENGINE P/N:</b> 076785	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 5.0 quarts		<b>COOLANT CAPACITY:</b> 5.25 gallons		<b>User Notes</b> PIB01-06-S Flex Drive Kit 0D43280SRV Spark Plug Wires could be 0A4351 Plugs 0A37970172 (Eng P/N 0A4350)	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Fuel/Air (Non Turbo)			08303400PM		
Oil/Fuel/Air (Turbo)			083034B0PM		
Oil/Fuel			083034A0PM		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	055505				
Oil Filter (Bypass)					
Fuel Filter	029608	gasoline only			
Air Filter	0A46370SRV	11.5" CA326 (Qty 2 required - Twin Turbo)			
Air Filter	060834				
V-Belt	055462	3/8" x 49-1/8"			
V-Belt	058785	3/8" x 52-7/8"			
Thermostat	075885				
Thermostat Gasket	048665				
Water Pump	0767850123	with gaskets			
Water Pump Gasket	0767850122	Qty 2 required			
Starter Motor	059056ASRV				
Spark Plug	0767850171	8 per engine			
<b>ADDITIONAL REFERENCE PARTS</b>					
Spark Plug Wires	055508				
Timing Chain	0767850118				
Distributor Cap	NA	see local GM dealer			
Distributor Rotor	NA	see local GM dealer			
Bolt, Starter	058385A	4-1/4" / Qty 2 required			
Service Manual	0C5456				
Parts Manual	074000G0PB				

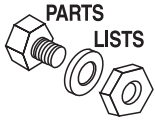


## Section 5 — Gas Quick Reference Parts

GENERAC® POWER SYSTEMS


<b>ENGINE SIZE:</b> 8.1 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> GM	<b>ENGINE P/N:</b> 0C8166	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> 8.0 quarts		<b>COOLANT CAPACITY:</b> 5.3 gallons		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Air			0C816600PM		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Special Notes</b>			
Oil Filter (Main)	0C81660135				
Oil Filter (Bypass)					
Fuel Filter					
Air Filter	0F5419				
Air Filter	0A46370SRV	11.5 CA326 w/Turbo, Twin qty 2 (check BOM)			
Belt, Serpentine	0A4278C	71.5" LG			
Thermostat	0C81660163				
Thermostat Gasket	0C6960				
Water Pump	0C81660122	Kit (w/gasket)			
Water Pump Gasket					
Starter Motor	059056A				
Spark Plug	0C81660212				
<b>ADDITIONAL REFERENCE PARTS</b>					
Bolt, Starter	058385A	4-1/4" / Qty 2 required			
Service Manual	0E7085				
Parts Manual	0E7949				

<b>ENGINE SIZE:</b> 13.3 Liter	<b>FUEL:</b> Gas	<b>MAKE:</b> Hino	<b>ENGINE P/N:</b> CONSULT FACTORY	<b>MODEL:</b> —	
<b>OIL CAPACITY:</b> —		<b>COOLANT CAPACITY:</b> —		<b>User Notes</b>	
<b>SCHEDULED MAINTENANCE KITS</b>					
<b>Description</b>			<b>Part Number</b>		
Oil/Bypass			08476100PM		
Oil/Bypass/Air			084761A0PM		
<b>COMMON REFERENCE PARTS</b>					
<b>Description</b>	<b>Part Number</b>	<b>Description</b>	<b>Special Notes</b>		
Oil Filter (Main)	0590890101		small		
Oil Filter (Bypass)	0590890102		large		
Fuel Filter					
Air Filter	084288	check BOM			
V-Belt	0590890625	set of 2			
V-Belt	079930	230/250/275 kW			
Thermostat	0590890624				
Thermostat Gasket	0590890605				
Water Pump	0590890596	Assembly			
Water Pump Gasket	0590890595	cylinder liner			
Starter Motor	0590890785				
Spark Plug	084750	6 per engine			
<b>ADDITIONAL REFERENCE PARTS</b>					
Water Pump O-ring	0590890670				
Ignition Wire	084261				
CDI Ignition Controller	084206A				
Ignition Coil	084206B				
Magnetic Pick Up Ignition	084206C				
Heater	059687				
Starter Solenoid	OBSOLETE	Old Style Pre 1992			
Starter Solenoid	0768150100	New Style Post 1992			
Parts Manual	013300G0PB				

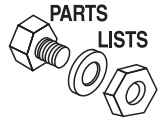

## COMMON PARTS FOR LIQUID COOLED STANDBY GENERATORS

STANDBY COMMON PARTS	PART NUMBER
ELECTRIC FUEL TRANSFER PUMP FROM TANK	065509
HIGH TEMP SWITCH 256 DEGREE (EXCEPT FOR 1.6L FIAT GEN II 0973900250)	035606
WATER LEVEL SENSOR	0G0725A
WATER TEMP SWITCH PRE HEAT SHUTDOWN	066246
WATER TEMPERATURE SENDER	053667
LOW TEMP. PRE ALARM SWITCH	061918
LOW OIL PRESSURE PRE ALARM SWITCH 20 PSI	062100
RPM SENSOR, MAG P/U ASSY..(1000 OHMS) APPROX 1/8" DIAMETER	082130 A,B,C,D
RPM SENSOR, MAG P/U ASSY.(OLD STYLE) 120 OHM APPROX 3/8 DIA.	064495
RPM SENSOR CABLE, MAG P/U ASSY. (OLD STYLE SENSOR)	064587 A,B,C
OIL PRESSURE SENDER ELECT	053666
OIL PRESSURE GAUGE	055405
OIL PRESSURE GAUGE KIT (053666,055405)	053666CSR
SWITCH AMP/VOLT SELECT (NEW STYLE)	061945
3 POSITION ROTARY SWITCH (OLD STYLE)	061143
SUPPRESSION ASSEMBLY - ALL CONTROL PANELS	070882
7 DAY EXERCISER ASSY	0642170SRV
DELUXE EXERCISER ASSY	0639190SRV
DELUXE EXERCISE COVER	064298
TRANSFER CONTROL RELAY	063617
IN-PHASE MONITOR PCB	0927340SRV
OIL PRESSURE SWITCH 4PSI	077667
5/8 O.D. TUBE FOR THERMOSTAT	087468
5/8 TUBE MOUNT THERM. (LOW TEMP. PRE ALARM)	087469
BLOCK HEATER 1000 WATT (OLD STYLE)	066034A
BLOCK HEATER 1500 WATT (OLD STYLE)	066034B
BLOCK HEATER THERMOSTAT (OLD STYLE)	066034C
500 WATT 120V BLOCK HEATER (NEW)	084918
1000 WATT 120V BLOCK HEATER (NEW)	084918A
1000 WATT 240V BLOCK HEATER (NEW)	084918B
1800 WATT 120V BLOCK HEATER (NEW)	084918C
2000 WATT 240V BLOCK HEATER (NEW)	084918D
2500 WATT BLOCK HEATER	059687
BRACKET FOR NEW STYLE BLOCK HEATER	084427
5 LAMP ANNUNCIATOR (ENGINE MONITOR PCB)	0700830SRV
VOLTMETER AC (0-300 VOLTS)	070043
VOLTMETER AC (0-600 VOLTS)	070044
DUAL VOLTMETER	0799830SRV
3/4 x 18 BRAIDED FLEX FUEL LINE (FOR GAS UNITS)	0D3031
VIBRATION MOUNTS FOR CONTROL PANELS	040479

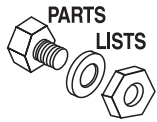

## Section 7 — Required Parts

### GENERAC® POWER SYSTEMS

## REQUIRED PARTS LIST FOR SERVICE OF GENERAC POWER SYSTEMS

The following list of parts, is required field stock for servicing of the Generac Power Systems. Additional travel time and mileage to obtain a replacement part listed below, is not covered under The Warranty guidelines.

### GENERAC POWER SYSTEMS FIELD SERVICE PARTS KITS

**NOTE: Any repairs over \$ 1000 or unusual repair times exceeding the Scheduled Flat Rate, or Excessive Travel Time or Mileage. Must have a CONTROL NUMBER from the Technical Service Staff before repairs are made.**

#### PART NUMBER = 078099EPTS

(are the required parts for Standby Units )

Part Number	Description	Qty
0A40870SRV	Master Control Box -E Panel	1
0A5705	E-Module Fuse	4
0A8584	Switch, Oil Pressure	1
0A86370SRV	MK III Exerciser	1
0D2244F	Assy, Magnetic Pickup (Deutsch)	1
0D2244M	Assy, Magnetic Pickup (Deutsch)	1
0E0505	Oil Pressure Sender (Deutsch)	1
0G0728	Low Coolant Level Sensor (Deutsch)	1
022676	Fuse 15A	2
028578	Fuse 10A	2
032300	Holder, Fuse	1
053666	Sender, Oil Pressure	1
056739	Relay Solenoid 12V DC	1
0G0725A	Sensor, Coolant Level	1
063617	Relay Pnl 12V DC DPDT	1
0639190SRV	Assy, Duluxe Exerciser	1
0642170SRV	Assy, 7-Day Exerciser	1
0676290SRV	Assy, Standard Sensing	1
0676800SRV	Voltage Regulator Assy	1
070042	Freq Meter 240V 55-65 Hz	1
070043	Voltmeter AC 0-300	1
070044	Voltmeter AC 0-600	1
073590A	Fuse 5A	4
074935ASRV	Transformer Service Kit (083264)	1
076009ASRV	PP Logic Assy 50/60 Hz	1
082130D	Assy, Mag Pickup 72"	1
082982	24V DC Starter Solenoid	1
0830480SRV	Potted Regulator w/o Fins	1
0830890SRV	Assy, 12/24V C Opt Control	1
0927340SRV	Assy, Inphase Monitor	1
098647ASRV	Electronic Governor Control	1
099236	Switch, Oil 8.0 PSI	1
0A6751	Switch, Hi-Temp 245D	1
0E1306	Tote Box for Kit	1

#### PART NUMBER = 0D8615EPTS

(are the required parts for Home Standby Units )

Part Number	Description	Qty
0A2944	Instr. Stepper Motor	1
0A8584	Switch, Oil Pressure 10 PSI	1
0D5070ASRV	Assy, 2A 12V UL Battery Chgr/S	1
0D86150SRV	Assy, HSB Controller Test	1
0D8631	Regulator, D/F Idle Cir V	1
0E31610SRV	Assy, PCB Bosch Gov Driver	1
0E49050SRV	Assy, PCB HSB Controller 3.0L	1
066386	Assembly, Brush Holder	1
075591	Holder Brush - Assembly	1
0830490SRV	Assy, Potted Regulator W/Fin	1
098225	Screw PFHST #2 x 5/8	2
098647ASRV	Assy, LC Elec Governor	1

#### PART NUMBER = 0F22100SRV


(are the required warranty parts for DCP units)

Part Number	Description	Qty
073590A	Fuse 5A X Buss	6
0C28460SRV	Modular Power AVR F Pnl/Serv	1
0D2244M	Assy Mag Pickup (3/8-24 Male)	2
0D7178H	Fuse Blade ATO 5A	4
0E7403B	Fuse Blade ATO 10A	4
0E7403C	Fuse Blade ATO 15A	2
0E0502	Temperature Sender, Delphi	2
0E2507	Probe, Coolant Level 3/8 NPTF	1
0E7548	Sender Oil Pressure 1/8" NPT	1
0E49090SRV	Assy PCB Bosch Gov Driver 24V	1
0E49110SRV	Assy PCB Signal Conditioner	2
0E9049ASRV	Assy PCB G-Panel Relay 24VDC	2
0F1414	Assy DCP Wire Retrofit	5

#### PART NUMBER = 0F22110SRV

(are the required warranty parts for Bi-Fuel units)

Part Number	Description	Qty
0E2800	Air Temp Sensor Mach.	1
0E38570SRV	Tach Sensor Deutsch	1
0E4515	Sensor, Knock Bi-Fuel	1
0E7881ASRV	Assy PCB Turbo Boost Press	1
0E7881BSRV	Assy PCB Gas Flow/Gas Press	1

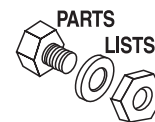

## QUICK REFERENCE PARTS LISTING FOR DG 50 UNITS

Description	Part No.	Qua.
Circuit Breaker 4.5 X 1 AUT30KW CNT 45K	048476	1
Resist Misc 25R X 25W	057405	1
Relay PNL 12VDC DPDT 8PIN	0C3211E	9
Assy Battery Charger Engine	0A18010SRV	1
Relay Solenoid 12VDC PNL MNT	056739	1
Assy Gov Act Mod	0C69470SRV	1
Module Power AVR F-PNL	0C28460SRV	1
Assy MK3 Exerciser	0A86370SRV	1
Assy F-Panel	0C57840SRV	1
Switch Emerg PB N.C.	098426C	1
Fuse 15A X AGC15	022676	1
Switch SPST 2GA51-78	0C4046	REF
Relay 12VDC 3PDT	0C3211K	1
Overspeed Mod 50 PCB	0C6860	1
Schematic Watchdog 50kW	0C7013	1
Switch Selector Volt/Amp 3 PH	074386	1
Assy, 56VA Transformer	0C8105	1
Assy Surge Protector	0C8102A	2
Switch Toggle 4PDT 15A Spade	055868	REF
Transformer 240/480V-120/240V	064126	1
Assy Surge Protect	0C8102	4
Thermostat Oil	0C4811	1
Oil Level Switch	0C4978	1
Assy Bridge Rectifier	090152	1
Distributor Set	0C4386	1
Valve PCV	0A4121	1
Coil Ignition	0C4385	1
Thermostat Gasket	048665	1

Description	Part No.	Qua.
Thermostat 195 Deg F	075885	1
Sensor Coolant Level	0G0725A	1
Sender Water Temp	053667	2
Sender Oil Pressure	053666	1
Assy Magnetic Pickup	0D2244M	1
Regulator Voltage - 20A	0A2702	1
Mixer Impco 225M	0C7650	1
Air Cleaner Gasket	061258	1
Carburetor Gasket	0A6613	1
Assy Natural Gas Solenoid	0C7598	1
Pump Oil Transfer	0C8550	2
Catalytic Muffler	0D3476	1
Assy Block Heater	0C7850	1
Distributor Gasket	0C4389	1
Spark Plug Wires	0C4701	1
Alternator DC Assy	0C6234	1
Gasket Exhaust Ring	044149	2
Gasket Exhaust Manifold	055489	2
Valve Solenoid	0D3442H	1
Controller Air/Fuel Ratio	0D3442A	1
Battery-9V Transistr	063998	1
Radiator Hose-Upper	0C5373	1
Radiator Hose-Lower	0C8016	1
V-Belt Green 50"	0C6549B	2
Belt Serpentine	0C9617	1
Spark Plug	059503	8
Oil Filter	0C3784	2
Air Cleaner 50kW 5.7	0C3197	1
Battery 12VDC 460A F-3ET	0C3100A	1



## Section 9 — Transfer Switch Common Parts

GENERAC® POWER SYSTEMS

### W TYPE TRANSFER SWITCH COMMON PARTS

Contactor	Description Of Switch	Coil	Bridge Rectifier	Limit Switch
0D7300	100Amp 2P	0C2150A	0C4135	071345
0D7301	100Amp 3P	0C2150A	0C4135	071345
0D7302	100Amp 4P	0C2150B	0C4135	071345
064775	200Amp 2P	0C2150B	0C4135	071345
0C88850SRV	200Amp 3P	0C2150B	0C4135	071345
064777	200Amp 4P	0C2150C	0C4135	071345
0D7294	400Amp 2P	0C2150D	0C4135	071345
0D7295	400Amp 3P	0C2150D	0C4135	071345
0D7296	400Amp 4P	0C2150E	0C4135	071345


\*Not interchangeable with WN type switch

### WN TYPE TRANSFER SWITCH COMMON PARTS

Contactor	Description Of Switch	Main Coil	Select Coil	Trip Coil	Bridge Rectifier	Limit Switch	Select Switch
064787P	100 Amp 3 Pole	071330	071335	071336	0824270	071345	074672A
064788P	100 Amp 4 Pole	071331	071335	071336	0824270	071345	074672A
064790P	200 Amp 3 Pole	071331	071335	071336	0824270	071345	074672A
064791P	200 Amp 4 Pole	OBSOLETE	071335	071336	0824270	071345	074672A
064796P	400 Amp 3 Pole	071333	071335	071337	0824270	071345	074672A
064797P	400 Amp 4 Pole	071334	071335	071337	0824270	071345	074672A
072111	600 Amp 3 Pole	081151	081150	081147	082428	071345	074672A
072117	600 Amp 4 Pole	081152	081150	081147	082428	071345	074672A
072113	1000 Amp 3 Pole	081152	081150	081147	082428	071345	074672A
072119	1000 Amp 4 Pole	081153	081150	081147	082428	071345	074672A
072120	1600 Amp 3 Pole	081153	081150	081147	082428	071345	074672A
072115	2000 Amp 3 Pole	081155	081150	081148	082428	071345	074672A
072121	2000 Amp 4 Pole	081156	081150	081148	082428	071345	074672A
0721160SRV	2600 Amp 3 Pole	081156	081150	081148	082428	071345	074672A
072122	2600 Amp 4 Pole	081157	081150	081148	082428	071345	074672A

### Y TYPE TRANSFER SWITCH COMMON PARTS

Contactor	Description Of Switch	Coil	Bridge Rectifier	Limit Switch 1 & 2	Limit Switch 3
063302	105 Amp 2 Pole	064337	083060	064709	064710
062642	105 Amp 3 Pole	064337	083060	064709	064710
063597	105 Amp 4 Pole	064337	083060	064709	064710
062643	150 Amp 2 Pole	064337	083060	064709	064710
062643	150 Amp 3 Pole	064337	083060	064709	064710
OBSOLETE	150 Amp 4 Pole	064337	083060	064709	064710
062677	200 Amp 2 Pole	064337	083060	064709	064710
064198	200 Amp 3 Pole	064337	083060	064709	064710
063598	200 Amp 4 Pole	064337	083060	064709	064710
062677	200 Amp 2 Pole	064337	083060	064709	064710
064198	200 Amp 3 Pole	064337	083060	064709	064710
063598	200 Amp 4 Pole	083528	083060	064709	064710
062645	300 Amp 2 Pole	064337	083060	064709	064710
062646	300 Amp 3 Pole	064337	083060	064709	064710
064100	300 Amp 4 Pole	083528	083060	064709	064710
062647	420 Amp 2 Pole	064337	083060	064709	064710
062648	420 Amp 3 Pole	064337	083060	064709	064710
064344	420 Amp 4 Pole	064337	083060	064709	064710

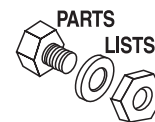

## COMMON PARTS FOR CONTROL PANELS

**NOTE:** When replacing an entire control panel, a unit Model Number and Serial Number are required.

A OPTION CONTROL PANEL P/N 084851A	
Part #	Description
0824950SRV	Control PCB
0676800SRV	Voltage Regulator
049939	Field Boost Diode
074137	24-12V Converter
055405	Oil Pressure Gauge
055406	Temperature Gauge
082984	Resistor Assy 120R 10% 2W
062304	DC Amp Meter
070081	Hour Meter
053693	Volt Set Pot.
070202	12V Panel Light
083288	24V Panel Light
060108	Oil Pressure Switch
0G0725A	Coolant Level Sensor
056739	12V Starter Solenoid
082982	24V Starter Solenoid
024044A00A	Brushes (When Used)
074244	Diode Bridge 25A 600V
042595	Varistor, Use with 074244
090152	New Style Bridge Rectifier
053666	Oil Pressure Sender


B OPTION CONTROL PANEL P/N 084851B	
Part #	Description
0824950SRV	Control PC
0676800SRV	Voltage Regulator
049939	Field Boost Diode
061945	Volt/Amp Switch
074137	24/12 Volt Converter
070042	Frequency (HZ) Meter
053666CSR	Oil Pressure Gauge Kit
055406	Temperature Gauge
082984	Assy 120R 10% 2W
062304	DC Amp Meter
070081	Hour Meter
053693	Volt. Set. Pot
070202	Panel Light (12V)
083288	Panel Light (24V)
0G0725A	Coolant Level Sensor
056739	Starter Solenoid (12V)
082982	Starter Solenoid (24V)
024044A00A	Brushes (When Used)
074244	Diode Bridge 25A 600V
056739	Preheat Contactor 12V (Diesel)
099236	Oil Pressure Switch

C OPTION CONTROL PANEL P/N 084851C	
Part #	Description
0830890SRV	Control PCB
0676800SRV	Voltage Regulator
049939	Field Boost Diode
061945	Volt/Amp Select Switch
074137	24-12V Converter
070042	Frequency (HZ) Meter

C OPTION CONTROL PANEL (CONTINUED)	
Part #	Description
055405	Oil Pressure Gauge
053666	Oil Pressure Sender
082985	Resistor Assy 68R 5% 5W
055406	Temperature Gauge
082984	Assy 120R 10% 2W
062304	DC Amp Meter
070081	Hourmeter
053693	Volt. Set. Pot.
070202	12V Panel Light
083288	24V Panel Light
099236	Oil Pressure Switch
0G0725A	Coolant Level Sensor
056739	12V Starter Solenoid
082982	24V Starter Solenoid
024044A00A	Brushes (When Used)
074244	Diode Bridge 25A 600V
042595	Varistor (Use With 074244)
090152	New Style Bridge Rectifier

D OPTION CONTROL PANEL P/N 084851D	
Part #	Description
0A10530SRV	CPU PCB
0A1056	Display Board
0A10540SRV	Interface Board
0A3035	Panel Lamps
0A2560	Relay 1P 50A 12V
049939	Field Boost Diode
044213	Charge Alt. Exc. Res. 10R 5% 12W
025192	Charge Alt. Exciter Diode 600V 2A
0A35570SRV	Modem
0A3556U	GenLink Software, User Version
0A3556P	GenLink Software, Pro Version
0A4042	Cable RS-232 6FT
032300	Fuse Holder
022676	Fuse 15A

E OPTION CONTROL PANEL P/N 084851E	
Part #	Description
0A40870SRV	Master Control Box
044213	Resistor
025192	Diode
049939	Rectifier
098426A	Emergency Stop Switch
098426C	Contact, Emergency Stop Switch
071361	Potentiometer
070202	Panel Light
032300	Fuse Holder
022676	Fuse
070045	Ammeter
070043	Voltmeter AC 0-300
070044	Voltmeter AC 0-600
070042	Frequency Meter 60HZ
070042A	Frequency Meter 50HZ
061945	Volt/Amp Switch
0A408700SV	E Panel Keys/ Set Of 2

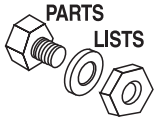

## Section 11 — Electronic Governors


GENERAC® POWER SYSTEMS

### ELECTRONIC GOVERNORS

ENGINE	FUEL	KW	CNTRL #	ACTUATOR #
1.2L	GAS	10		0C3706
1.2L	GAS	11		0C3706
1.2L	GAS	12		0C3706
1.2L	GAS	16		0C3706
1.2L	GAS	20		0C3706
1.2L	GAS	25		0C3706
1.6L	GAS	10	OBSOLETE	082003
1.6L	GAS	15	OBSOLETE	082003
1.6L	GAS	20	OBSOLETE	082003
1.6L	GAS	25	OBSOLETE	082003
5.7L	GAS	30	0F0437	067707
5.7L	GAS	31	0F0437	067707
5.7L	GAS	35	0F0437	067707
5.7L	GAS	36	0F0437	067707
5.7L	GAS	40	0F0437	067707
5.7L	GAS	41	0F0437	067707
5.7L	GAS	45	0F0437	067707
5.7L	GAS	50	0F0437	067707
5.7L	NAT GAS	75	090090	090091
5.7L	NAT GAS	76	0F0437	067707
5.7L	NAT GAS	77	0F0437	067707
5.7L	LP GAS	80	090090	090091
5.7L	LP GAS	81	0F0437	067707
5.7L	LP GAS	82	0F0437	067707
7.4L	GAS	60	0F0437	067707
7.4L	GAS	65	0F0437	067707
7.4L	GAS	70	0F0437	067707
7.4L	LP/NAT	100	0F0437	067707
7.4L	LP/NAT	101	0F0437	067707
7.4L	LP/NAT	102	0F0437	067707
13.3L	NAT GAS	124	0F0437	085129
13.3L	NAT GAS	125	0F0437	085129
13.3L	NG N/A	125	0F0437	085129
13.3L	LPG N/A	126	0F0437	085129
13.3L	LPG N/A	127	0F0437	085129
13.3L	NAT GAS	150	0F0437	085129
13.3L	NAT GAS	175	0F0437	085129
13.3L	NAT GAS	200	0F0437	085129
2.2L	DIESEL SAE	9	0F0437	059161
2.2L	DIESEL	10	0F0437	059161
2.2L	DIESEL SAE	14	0F0437	059161
2.2L	DIESEL	15	0F0437	059161

ENGINE	FUEL	KW	CNTRL #	ACTUATOR #
2.4L	DIESEL SAE	9	099910	082003
2.4L	DIESEL	10	099910	082003
2.4L	DIESEL SAE	14	099910	082003
2.4L	DIESEL	15	099910	082003
2.4L	DIESEL SAE	19	099910	082003
2.4L	DIESEL	20	099910	082003
3.0L	DIESEL SAE	19	067709	067705
3.0L	DIESEL	20	067709	067705
3.0L	DIESEL SAE	24	067709	067705
3.0L	DIESEL	25	067709	067705
3.0L	DIESEL SAE	29	067709	067705
3.0L	DIESEL	30	067709	067705
3.0L	DIESEL SAE	34	067709	067705
3.0L	DIESEL	35	067709	067705
3.2L	DIESEL	20	067709	067705
3.2L	DIESEL	25	067709	067705
4.0L	DIESEL SAE	39	067710	067706
4.0L	DIESEL	40	067710	067706
4.0L	DIESEL SAE	49	067710	067706
4.0L	DIESEL	50	067710	067706
4.0L	DIESEL SAE	59	067710	067706
4.0L	DIESEL	60	067710	067706
4.0L	DIESEL SAE	74	067710	067706
4.0L	DIESEL	75	067710	067706
4.3L	DIESEL SAE	19	081713	080676
4.3L	DIESEL	20	081713	080676
4.3L	DIESEL SAE	24	081713	080676
4.3L	DIESEL	25	081713	080676
4.3L	DIESEL SAE	29	081713	080676
4.3L	DIESEL	30	081713	080676
4.3L	DIESEL SAE	31	081713	080676
4.3L	DIESEL	32	081713	080676
4.3L	DIESEL SAE	34	081713	080676
4.3L	DIESEL	35	081713	080676
5.0L	DIESEL	39	090090	090091
5.0L	DIESEL	40	090090	090091
5.0L	DIESEL	41	067709	067705
5.0L	DIESEL	48	067709	067705
5.0L	DIESEL	49	090090	090091
5.0L	DIESEL	50	090090	090091
5.0L	DIESEL	51	067709	067705
5.0L	DIESEL SAE	59	090090	090091



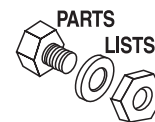


## ELECTRONIC GOVERNORS

ENGINE	FUEL	KW	CNTRL #	ACTUATOR #
5.0L	DIESEL SAE	60	090090	090091
5.0L	DIESEL	60	090090	090091
5.0L	DIESEL	61	067709	067705
5.0L	DIESEL	72	067709	067705
5.0L	DIESEL	76	067709	067705
5.0L	DIESEL SAE	79	090090	090091
5.0L	DIESEL SAE	80	090090	090091
5.0L	DIESEL	80	090090	090091
5.0L	DIESEL SAE	99	090090	090091
5.0L	DIESEL	100	090090	090091
5.0L	DIESEL	125	020850	090091
5.0L	DIESEL	150	020850	090091
6.4L	DIESEL	79	067710	067708
6.4L	DIESEL	80	067710	067708
6.4L	DIESEL SAE	99	067710	067708
6.4L	DIESEL	100	067710	067708
6.4L	DIESEL SAE	123	067710	067708
6.4L	DIESEL SAE	124	067710	067708
6.4L	DIESEL	125	067710	067708
6.4L	DIESEL	126	067710	067708
6.4L	DIESEL	150	068001	067708
6.4L	DIESEL	165	068001	067708
6.4L	DIESEL	175	068001	067708
7.5L	DIESEL	125	090090	090091
7.5L	DIESEL	126	090090	090091
7.5L	DIESEL	150	090090	090091
7.5L	DIESEL	180	020850	090091
7.5L	DIESEL	200	020850	090091
7.5L	DIESEL	225	020850	090091
13.3L	DIESEL	100	067710	067708
13.3L	DIESEL	130	067710	067708
13.3L	DIESEL SAE	149	067710	067708
13.3L	DIESEL	150	067710	067708
13.3L	DIESEL SAE	174	067710	067708
13.3L	DIESEL	175	067710	067708
13.3L	DIESEL	200	067710	067708
13.3L	DIESEL	230	067710	067708
13.3L	DIESEL	250	067710	067708
13.3L	DIESEL	275	080538	079944

## ELECTRONIC GOVERNOR KITS

ENGINE	FUEL	KIT #
1.0L	DIESEL	0A9024
1.2L	GAS	???
1.3L	GAS	067958
2.2L	DIESEL	093144
2.4L	DIESEL	098794
2.6L	GAS	066521
3.0L	GAS	0C9501
3.0L	DIESEL	0677150SRV
3.0L	DIESEL (KIA)	SOLD INDIVIDUALLY
3.9L	DIESEL (MITSUBISHI)	0E24810SRV
4.0L	DIESEL	0867990SRV
4.3L	GAS	0C9501A
5.0L	DIESEL	SOLD INDIVIDUALLY
5.7L	GAS	067301ASRV
6.4L	DIESEL	086798
7.4L	GAS	0202040SRV
7.4LGB	GAS	0202050SRV
7.5L	DIESEL	SOLD INDIVIDUALLY
13.3L	DIESEL	0867970SRV

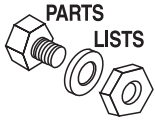

## Section 12 — Battery Options, Pre Alarm Kits & Battery Chargers

GENERAC® POWER SYSTEMS

### BATTERY OPTIONS

#### BATTERY CHARGERS

#### HIGH/LOW BATTERY ALARMS PCB

Description	Part Number
12 Volt	0615210SRV
24Volt	0615380SRV


#### BATTERY WARMERS

- Warms and insulates battery
- Thermostatically controlled
- 30° F on 40° F off temperature
- 120V operation
- 3 sizes available

Description	Part Number
28" Battery Warmer	0A6193
36" Battery Warmer	057148
72" Battery Warmer	057149
Thermostat Assembly	052010

#### PRE ALARM KITS

Engine Liter Size	Part Number
1.0L Diesel (ISM)	OBSOLETE
1.2L LPG (Nissan)	065501USRV
1.2L Gas (Nissan)	065501SESV
1.3L Gas (Mazda)	OBSOLETE
1.6L Gas (Fiat)	086641HSRV
2.2L Diesel (Mazda)	OBSOLETE
2.3L Gas (Ford)	OBSOLETE
2.6L Gas (Mitsubishi)	OBSOLETE
2.6L Turbo (Mitsubishi)	OBSOLETE
3.0L Gas (G.M.)	065501WSRV
3.0L Diesel (Mazda)	065501BSRV
4.0L Diesel (Caterpillar)	065501Z
4.0L Diesel (Hino)	086641ASRV
4.3L Gas Vortex (G.M.)	065501ESRV
4.3L Diesel (G.M.)	OBSOLETE
5.0L Diesel (IVECO)	086641FSRV
5.7L Gas (G.M.)	065501ESRV
6.0L Diesel (Caterpillar)	OBSOLETE
6.4L Diesel (Hino)	OBSOLETE
6.6L Diesel (Caterpillar)	086641FSRV
7.4L Gas (G.M.)	OBSOLETE
7.5L Diesel (IVECO)	086641FSRV
10.4L Diesel (Caterpillar)	086641ESRV
12.0L Gas (Mitsubishi)	OBSOLETE
13.3L Gas (Hino)	OBSOLETE
13.3L Diesel (Hino)	086641DSRV
Above 13.3L	0A5550SRV

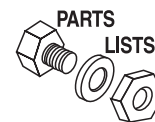**BATTERY CHARGERS (MAINTENANCE CHARGER)****2 AMP / 12 VOLT**

<b>NEW#: 0D4687</b>	
ASSY, 2A 12V UL PCB	0D5070ASRV
TRANSFORMER, 16V CT56VA UL	0D4707
AMMETER 0-5A DC	062060
FUSE 4A SLO BLO GLASS	067682B
FUSE 2A X AHC2	086310
FUSE HOLDER	032300

<b>OLD#: 062059 (OBS) (REPLACEMENT PARTS AVAILABLE)</b>	
ASSY 12V 2A BATT CHRGR	0679830SRV
AMMETER 0-5A DC	062060
FUSE 10A X AGC 10	028578
FUSE HOLDER	032300

**2 AMP / 24 VOLT**

<b>NEW#: 0D4701</b>	
ASSY, 2A 24V UL PCB	0D5070BSRV
TRANSFORMER, 24V CT 100VA UL	0D4706
AMMETER 0-5A DC	062060
FUSE 4A SLO BLO GLASS	067682B
FUSE 2A X AGC2	086310
FUSE HOLDER	032300

<b>OLD#: 069926 (OBS) (REPLACEMENT PARTS AVAILABLE)</b>	
PCB 24V 2A BATT CHRGR	0626740SRV
AMMETER 0-5A DC	062060
FUSE 10A X AGC10	028578
FUSE HOLDER	032300

**10 AMP / 12 VOLT**


<b>NEW#: 0D3490</b>	
ASSY, 10A 12V PCB	067666CSRV
AMMETER 0-15ADC	061526
VOLTMETER 0-15VDC	061527
FUSE 4A SLO BLO GLASS	067682B
FUSE 12AMP LITT 3AB-12	0D7178B
FUSE HOLDER	032300

<b>OLD#: 079535 (OBS) (REPLACEMENT PARTS AVAILABLE)</b>	
ASSY, 10A 12V PCB	067666CSRV
AMMETER 0-15ADC	061526
VOLTMETER 0-15 VDC	061527
FUSE 4A SLO BLO GLASS	067682B
FUSE 12 AMP	067683
FUSE HOLDER	032300

**10 AMP / 24 VOLT**

<b>NEW#: 0D3489</b>	
ASSY, 10A 24V PCB	067666ASRV
AMMETER 0-15ADC	061526
VOLTMETER 0-30VDC	061528
FUSE 7A SLO BLO GLASS	067682A
FUSE 12AMP LITT 3AB-12	0D7178B
FUSE HOLDER	032300

<b>OLD#: 079525 (OBS) (REPLACEMENT PARTS AVAILABLE)</b>	
ASSY PCB 10A 24/120V	067666ASRV
AMMETER 0-15ADC	061526
VOLTMETER 0-30VDC	061528
FUSE 7A SLO BLO GLASS	067682B
FUSE 12 AMP	067683
FUSE HOLDER	032300

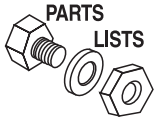

**Section 13 — Paint**

**GENERAC® POWER SYSTEMS**

**SPRAY PAINT-CANS**

<b>Part Number</b>	<b>Description</b>
042209T .....	Black
068878T .....	Burnt Orange (Standby)
075483T .....	Generac Tan
067026T .....	Heat Resistant Black
073444T .....	White
086590T .....	CAT Yellow
075768T .....	Anti Fungal Green
0C7572T .....	ANSI 61 Grey
0E5665T .....	Flannel Grey AC
072265T .....	Grainger Grey
0A5815TTEX .....	Texture Telecom Grey
042209TTEX .....	Texture Black
075483TTEX .....	Texture Tan
086400TTEX .....	Texture Craftsman® Grey
086535TTEX .....	Texture Red

**Please Note: paint cans are combustible and cannot be shipped "Air Freight".**

**TOUCH-UP PAINT**


½ oz. Bottles (brush & lid)

<b>Part Number</b>	<b>Color</b>
068878B .....	Standby Orange
075483B .....	Compartment Tan
073444B .....	White
042209B .....	Black
0A5815BTEX .....	Texture Telecom Grey
042209BTEX .....	Texture Black
075483BTEX .....	Texture Tan
086400BTEX .....	Texture Craftsman® Grey
086535BTEX .....	Texture Red

**FOUR PACKS**

<b>Part Number</b>	<b>Color</b>
068878P .....	Standby Orange
075483P .....	Compartment Tan
073444P .....	White
042209P .....	Black
0D7845 .....	Multi-Color Pack (Orange, Tan, White, Black)

**Please Note: for larger quantities of paint, please contact the factory.**

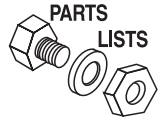

## USEFUL TOOLS NEEDED FOR THE SHOP & TECHNICIAN IN THE FIELD

### Master Key Set

Every Distributor, Dealer, Installer and Technician, should have the Generac Power Systems **MASTER KEY SET** - This set includes ALL Generac keys except 0C2164K. **Part # 0D6103**

KEY #	PART #	LOCK #
CH545	060069A	060069
1333	0D3037K	0D3037
C415A	0C83380SRV	0C8338
CH501	055315A	055315
CH502	0D4628	0C5859
BP112	067042A	067042
CH751	0C1023A	0C1023
SOUTH CO	0A5683	0A5682
E-3-26-819-15	020826	020825
SJ / 007	0A408700SV	E-PNL LOCK
AH112	0C2164K	0C2164
SOUTH CO	0A5683	0F5048
		QT Units check BOM

### Gas Pressure Tester

- Tester is rated from 0-35 inches water column, including a 1/8 inch NPT barbed fitting and hose.
- This will fit all air cooled and liquid cooled gaseous units up to 40 kW.
- Mounted in its own durable plastic case, with storage room for larger fittings and hardware.  
(Customer must supply fittings and hardware to allow testing of larger gaseous units above 40 kW).

**NOTE: This tester is for low pressure Natural Gas & LP Vapor Systems only!**

**Part # 0C8013**

### Generac Power Systems GenLink® Software CD Kits

**Part # 0E1630A** GenLink® Professional (for dealers only) with cable

**Part # 0E1631A** GenLink® Professional (for dealers only) without cable

**Part # 0E1632A** GenLink® User with cable

**Part # 0E1633A** GenLink® User without cable

### Generac Power System's Posters

Show you are a proud Generac Power Systems Authorized Dealer by displaying these great eye-catching posters in your place of business.

**Part # 0D4564** "we use only genuine Generac replacement parts"

**Part # 0D6326** "A little scheduled maintenance goes a long way." (Trainwreck)

**Part # 0D6326A** "A little scheduled maintenance goes a long way." (Bus)

**Part # 0D6326B** "A little scheduled maintenance goes a long way." (Sinking Ship)

**Part # 0D6326C** "A little scheduled maintenance goes a long way." (Wheels Off)

**Part # 0D6326D** "A little scheduled maintenance goes a long way." (Baseball)

**GENERAC<sup>®</sup>**  
POWER SYSTEMS, INC.

Generac Power Systems, Inc.  
Highway 59 & Hillside Rd.  
P.O. Box 8

Waukesha, WI 53187  
1-888-GENERAC

[MyGenerac.com](http://MyGenerac.com)

©2008 Generac Power Systems, Inc. All rights reserved.  
Specifications are subject to change without notice.  
Part No. 0D4316 rev. J / Printed in USA 12.08